 
 
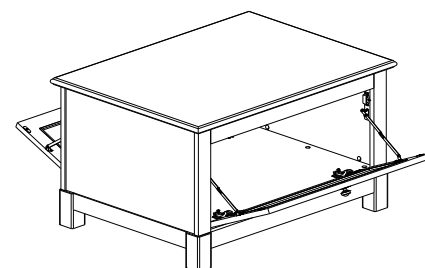 
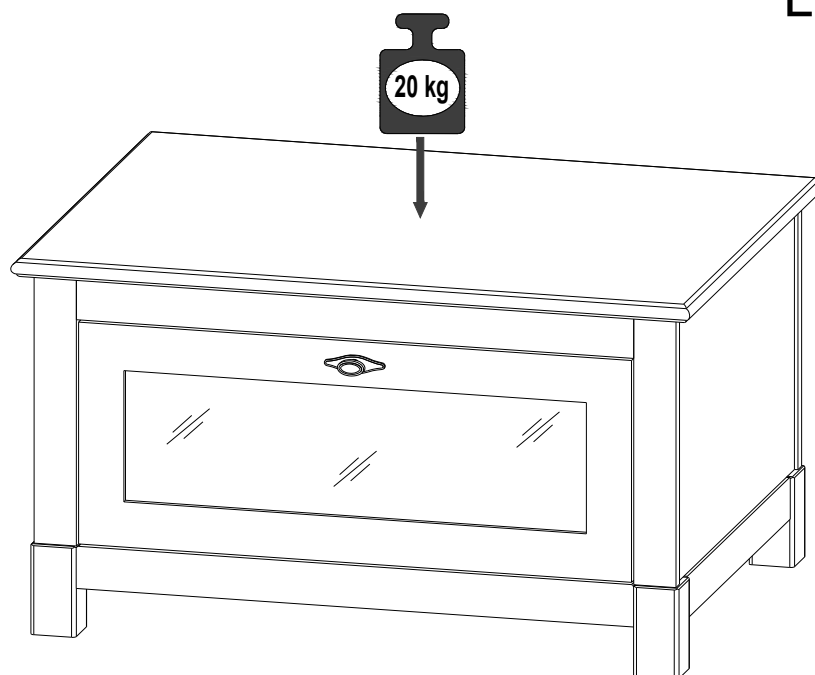 
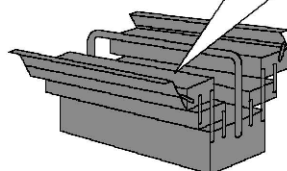 
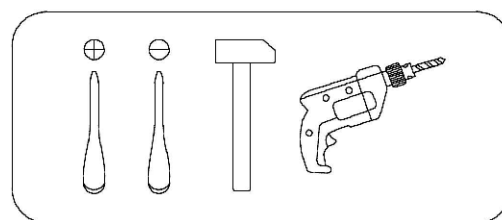 
















Art. Nr. 313337; 341337; 33166561

LKZ 40947



- | | | | |
|-----------|------------------------------------|-----------|--------------------------------|
| D | Montageanleitung | GB | Assembly instructions |
| FR | Notice de montage | IT | Istruzioni di montaggio |
| NL | Handleiding voor de montage | PL | Instrukcja montażu |
| CZ | Montážní návod | SK | Návod na montáž |
| HU | Szerelési útmutató | RO | Instrukțiuni de montaj |
| TR | Montaj talimatı | RU | Инструкция по монтажу |




            
 
 


Art. Nr.	G
313337	110015
341337	110013
33166561	110012



№	Size/MaB (mm)	Qty	✓	№	Size/MaB (mm)	Qty	✓
1	900x 670x 24	1		7	356x 56x 18	2	
2	811x 586x 15	1		8	739x 56x 24	2	
3	586x 356x 15	2		9	512x 56x 24	2	
4	733x 294x 18	2		10	739x 56x 18	2	
5	120x 60x 60	4		11	116x 24x 24	4	
6	356x 56x 18	2					

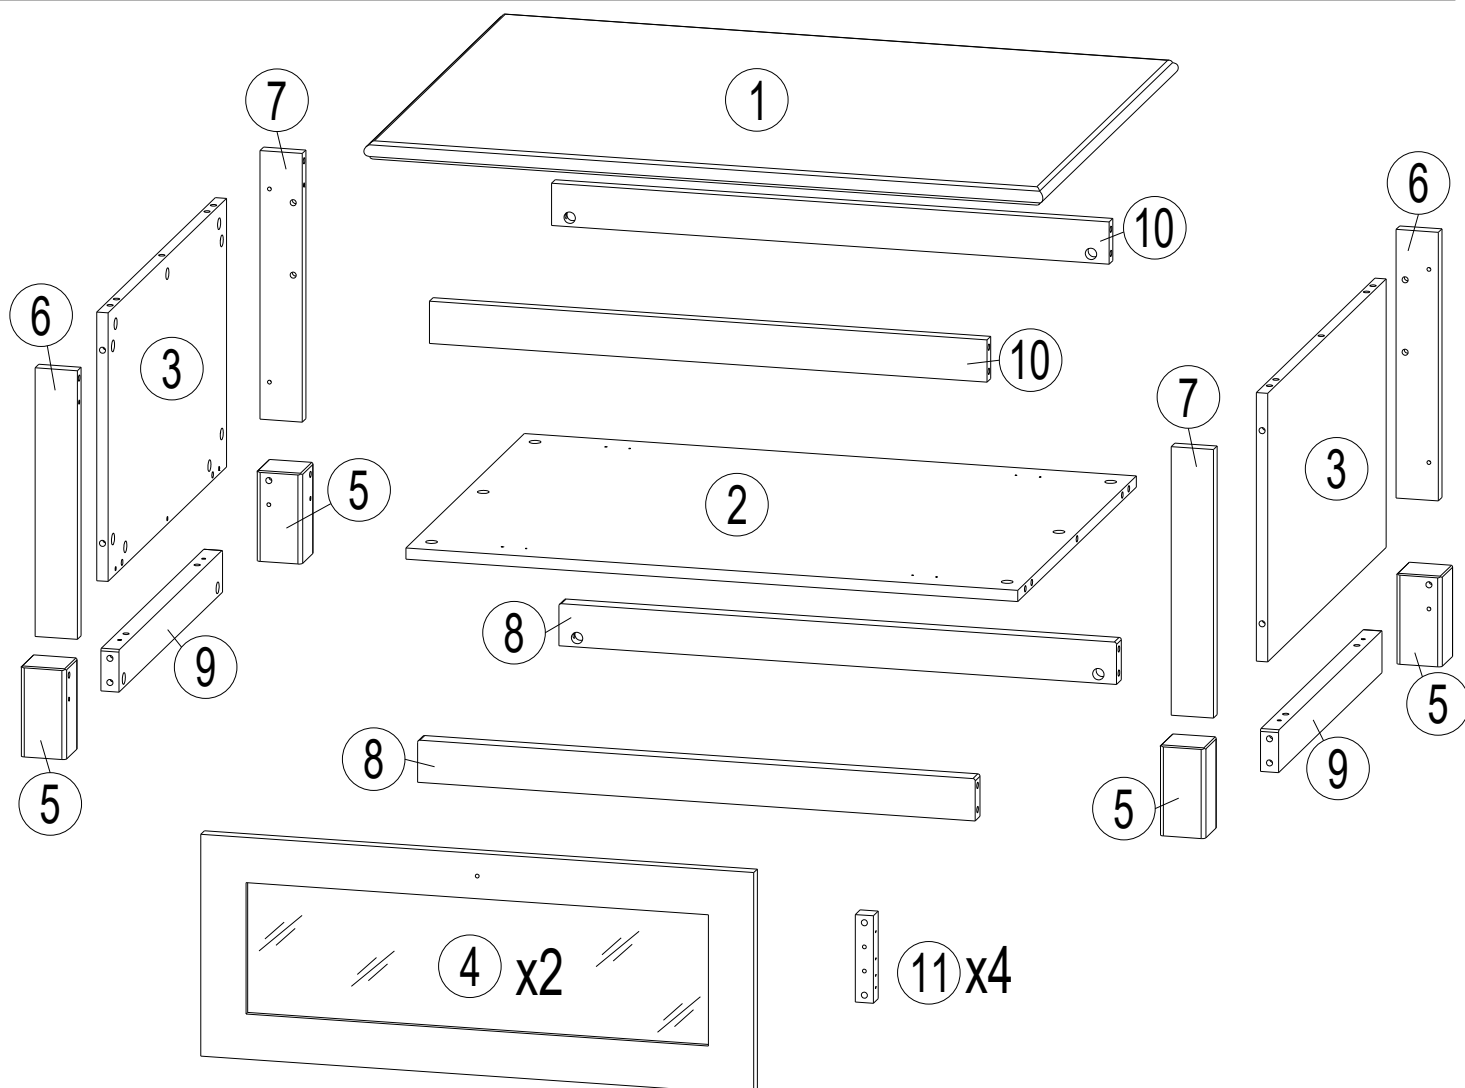 

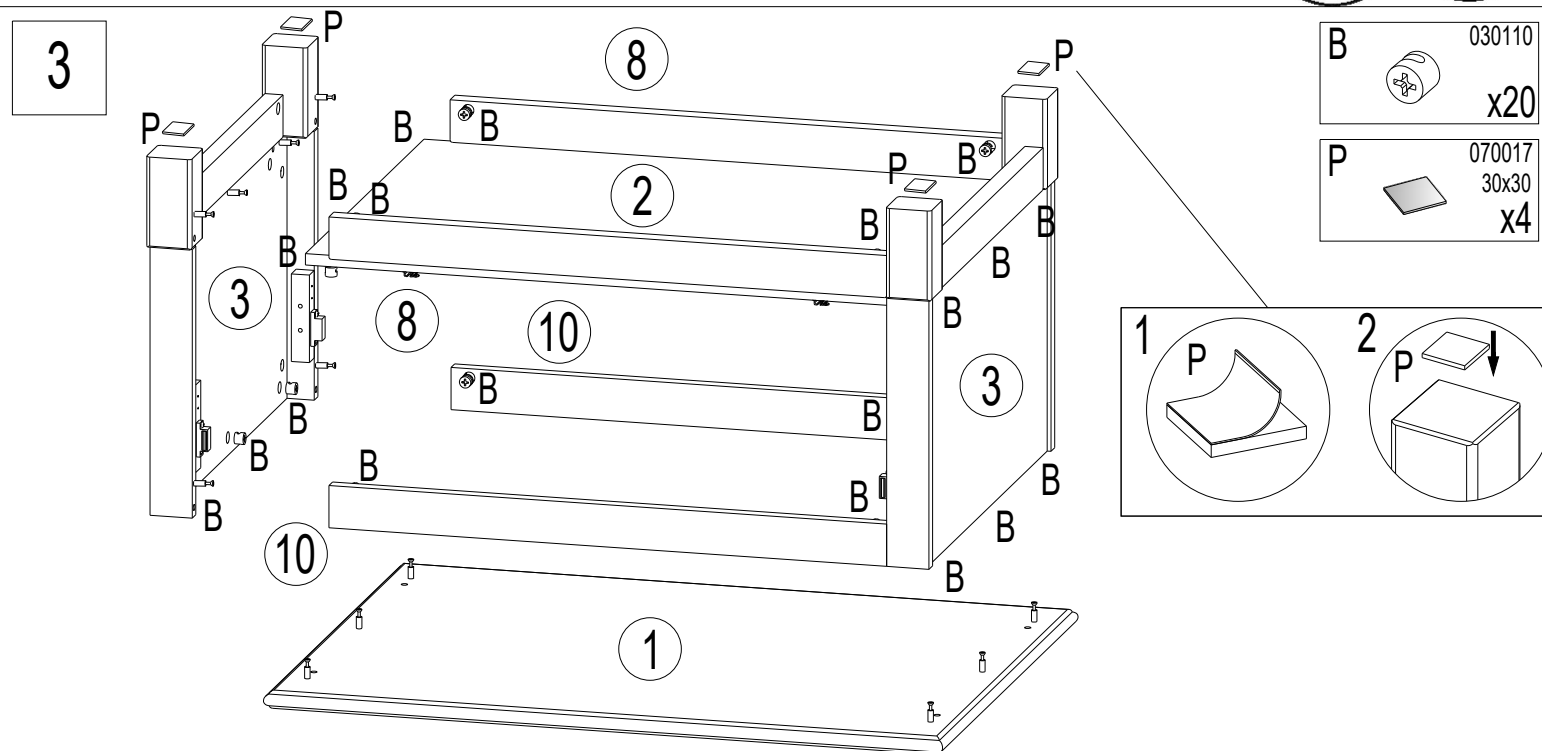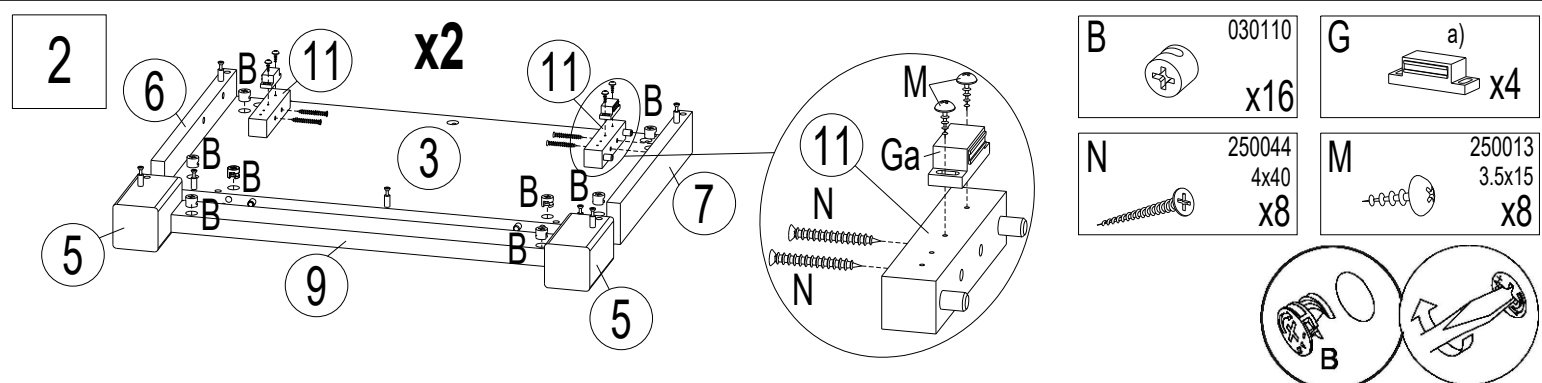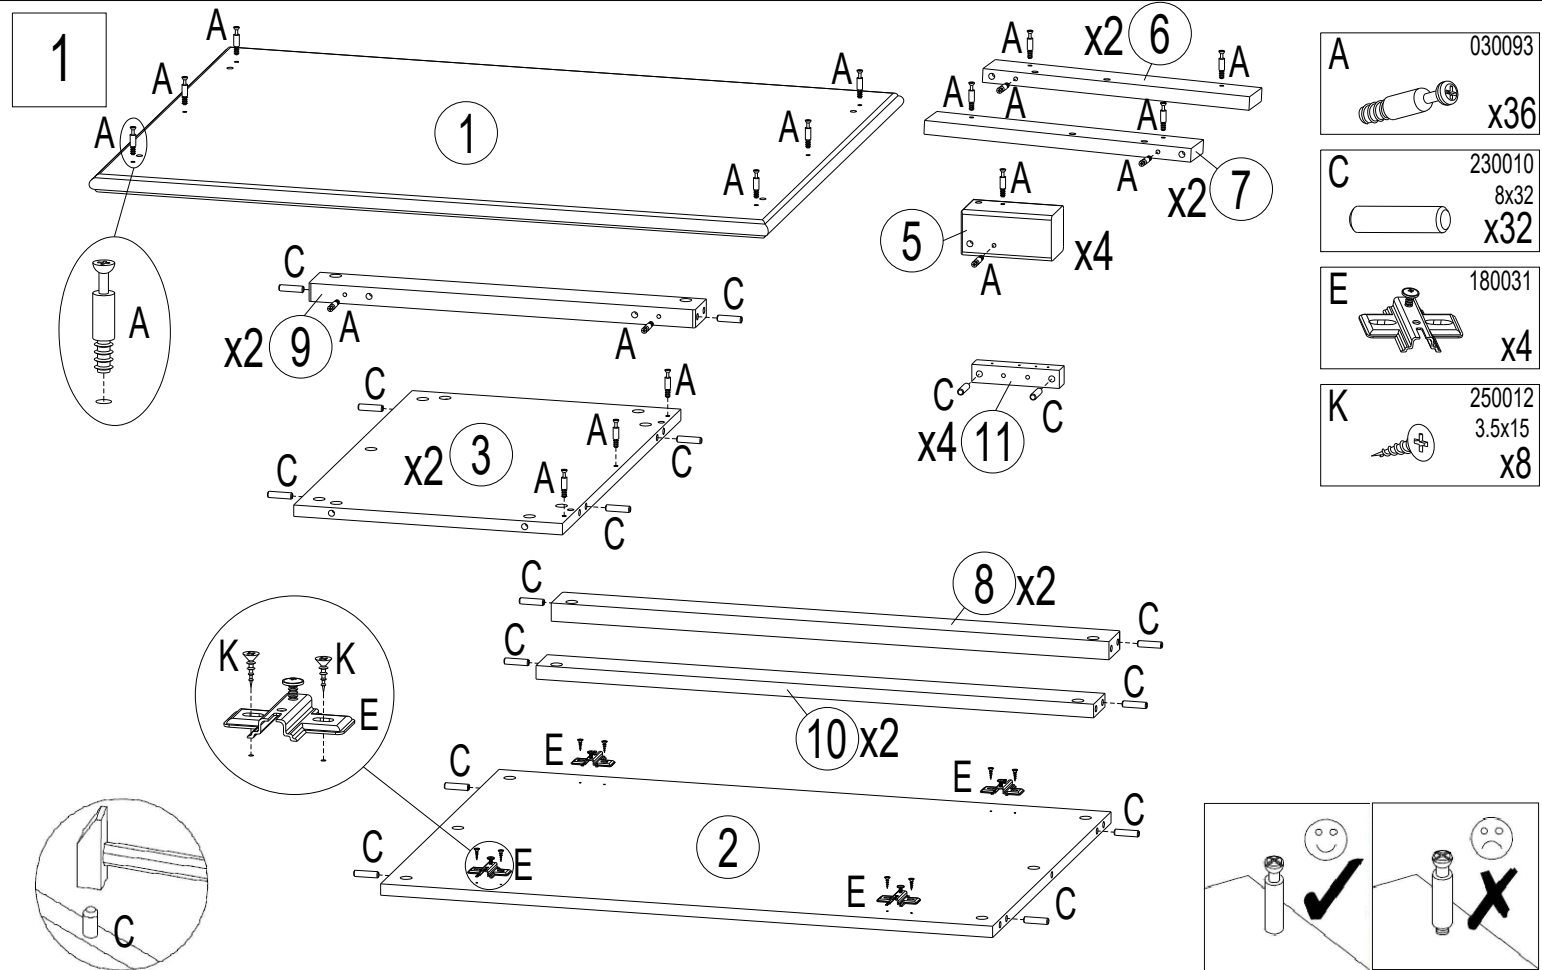   

D 180057 x4

J c) 210042
a) b) x2

H 030056
M4x35
x2

K 250012
3.5x15
x8

5

L 250004
3.0x13
x20

G b) x4

Q 070045
Home
x1

F 120014
x4

F

F

F

4

L

L

F

L

Gb

Gb

4

4

L

Gb

Q Home

4