


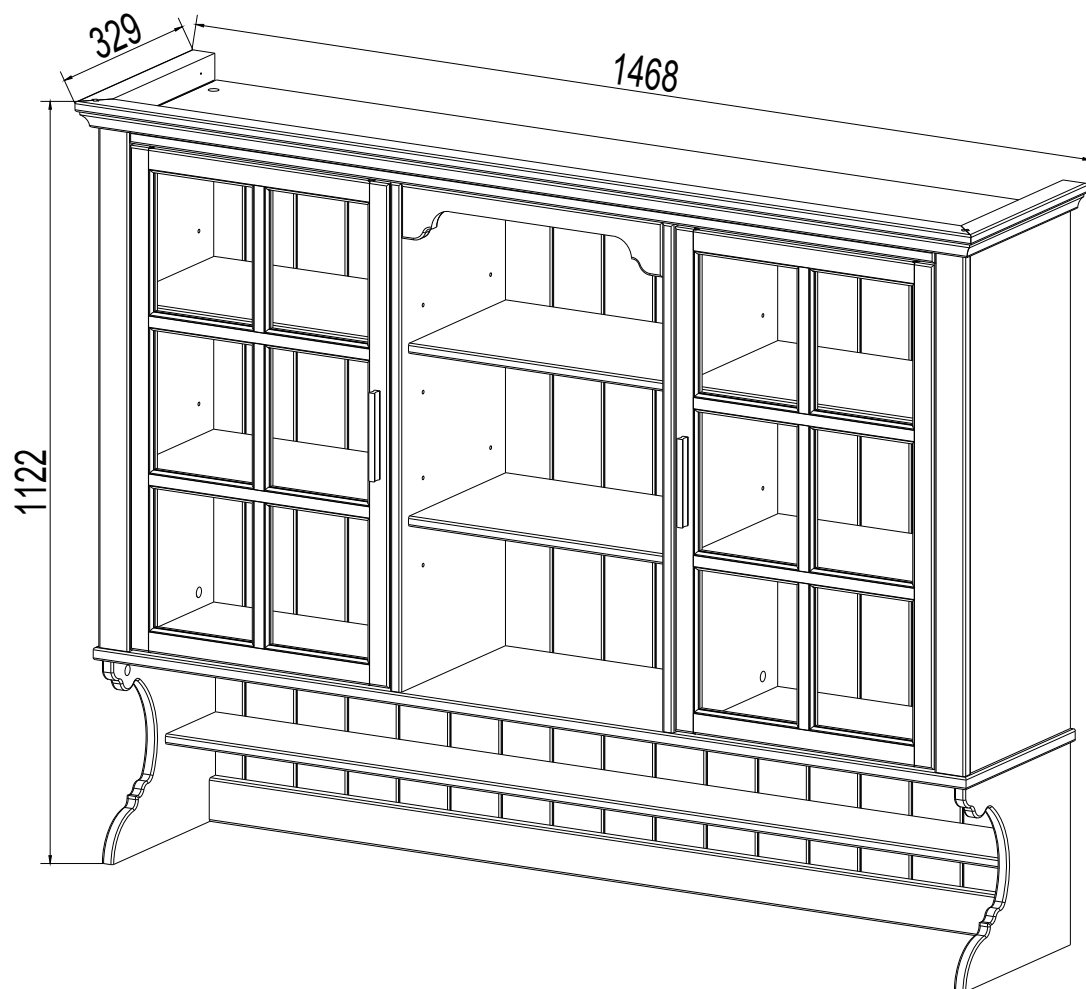
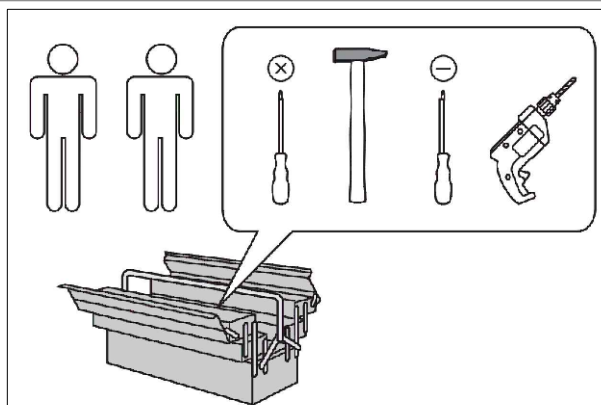
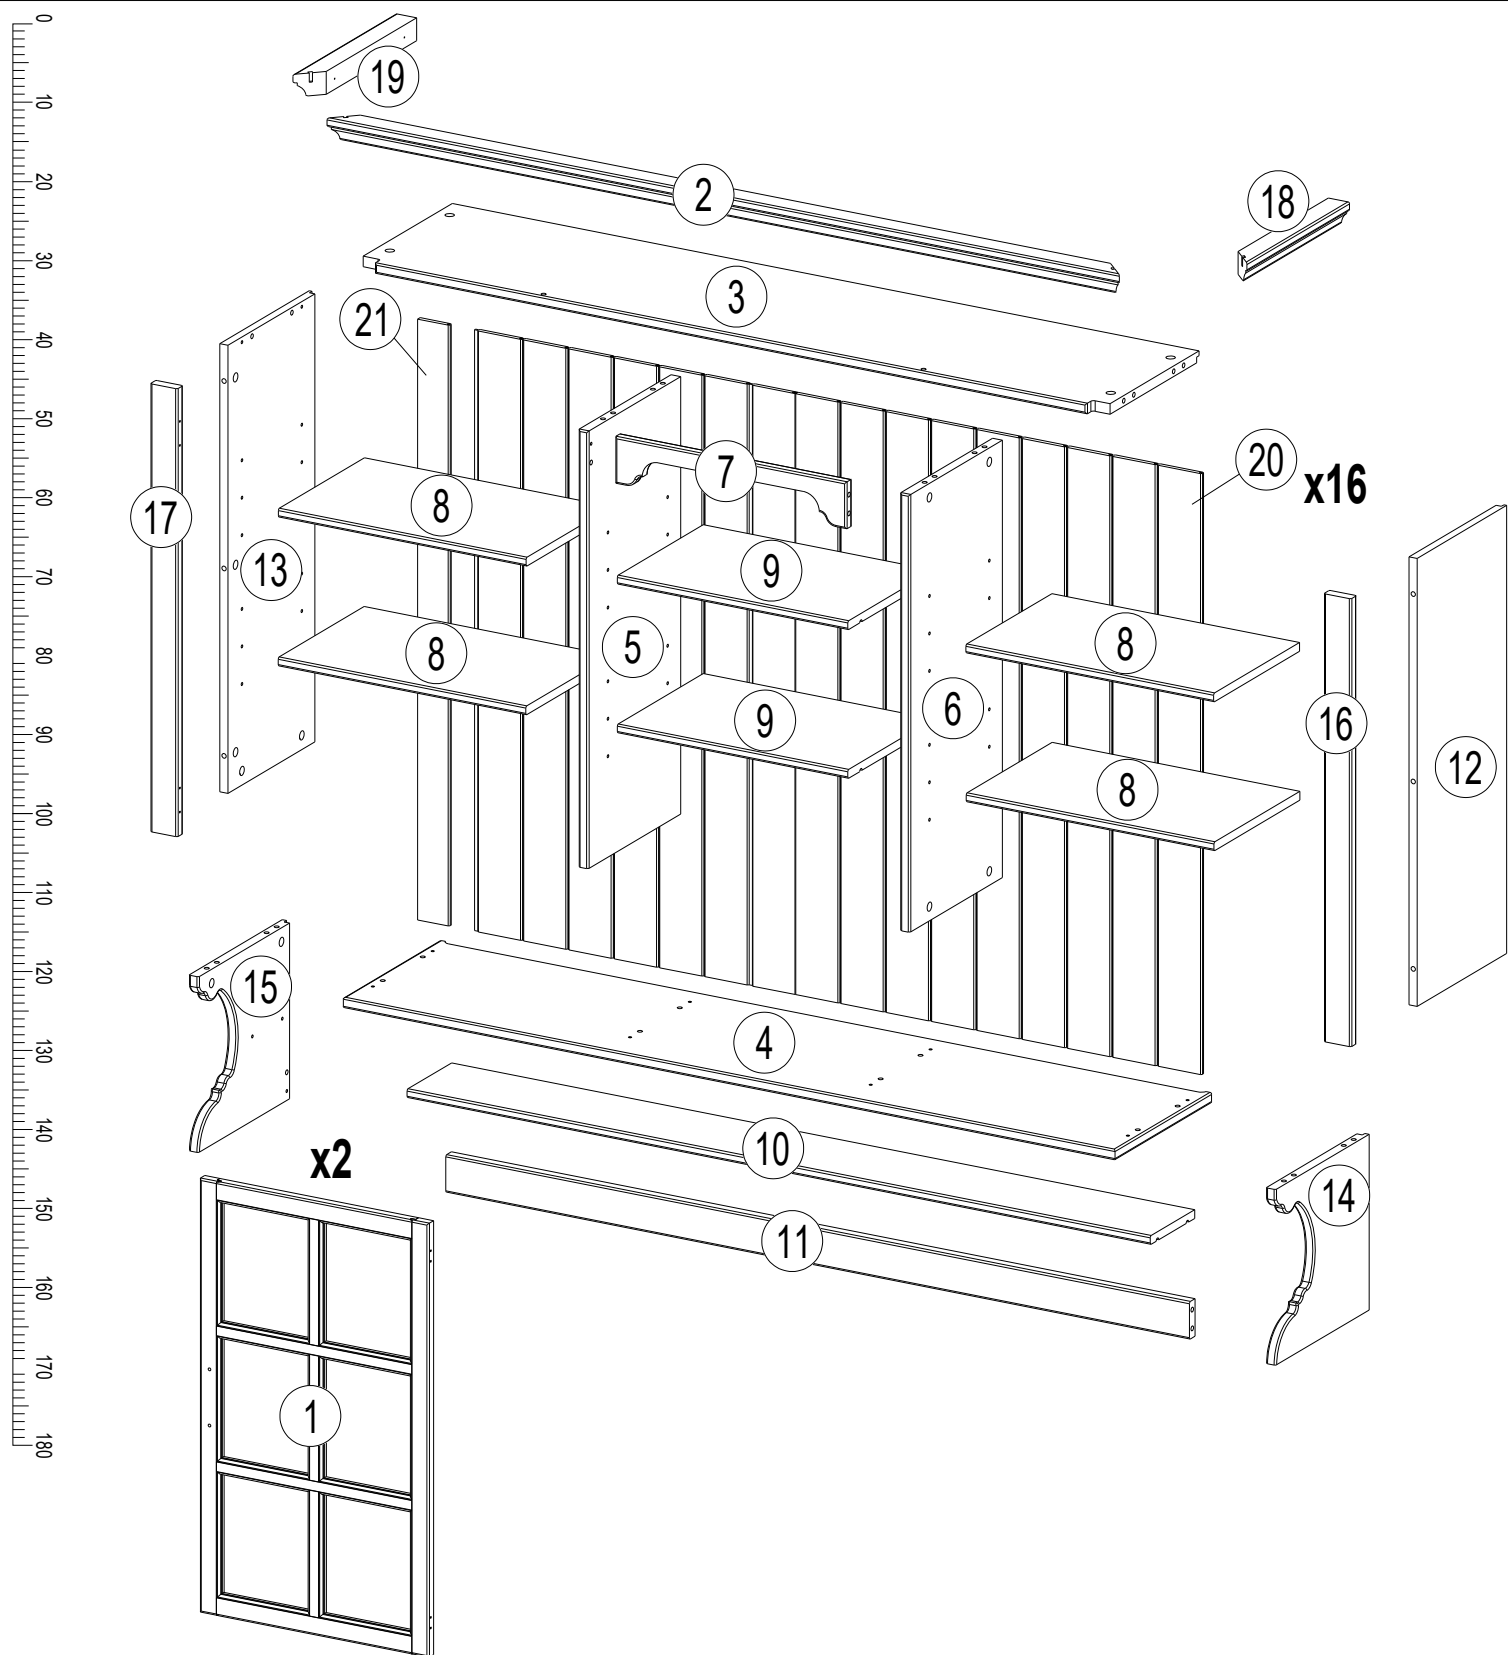






- | | | | |
|-----------|------------------------------------|-----------|--------------------------------|
| D | Montageanleitung | GB | Assembly instructions |
| FR | Notice de montage | IT | Istruzioni di montaggio |
| NL | Handlieding voor de montage | PL | Instrukcja montażu |
| CZ | Montážní návod | SK | Návod na montáž |
| HU | Szerelési útmutató | RO | Instrukțiuni de montaj |
| TR | Montaj talimatı | RU | Инструкция по монтажу |





A  030093 x30	B  030110 x30	C  230010 8x32 x26	D a)  110009/110011 b)  x2	E  210143 x2	F  030052 M4x22 x4
G  190011 x28	H  180132 x4	I  250013 3.5x15 x4	J  250010 3.5x13 x4	K  180073 x9	L  250012 3.5x15 x26
M  220018 L=15MM x2	N  250001 2.5x16 x16	O  220043 1,2x20 x3	P  180017 x2		
Z1  090004 8x40 x2	Z2  180080 76x31x15 x2	Z3  250012 3.5x15 x2	Z4  250044 4x40 x2		

No	Size/MaB (mm)	Qty	✓	No	Size/MaB (mm)	Qty	✓
1	741x423x18	2		12	765x287x15	1	
2	1468x39x39	1		13	765x287x15	1	
3	1384x305x18	1		14	300x300x18	1	
4	1430x310x18	1		15	300x300x18	1	
5	747x297x18	1		16	765x50x18	1	
6	747x297x18	1		17	765x50x18	1	
7	428x80x18	1		18	329x39x39	1	
8	459x276x15	4		19	329x39x39	1	
9	427x276x15	2		20	1026x89x8	16	
10	1377x143x15	1		21	1026x59x8	1	
11	1378x64x18	1					

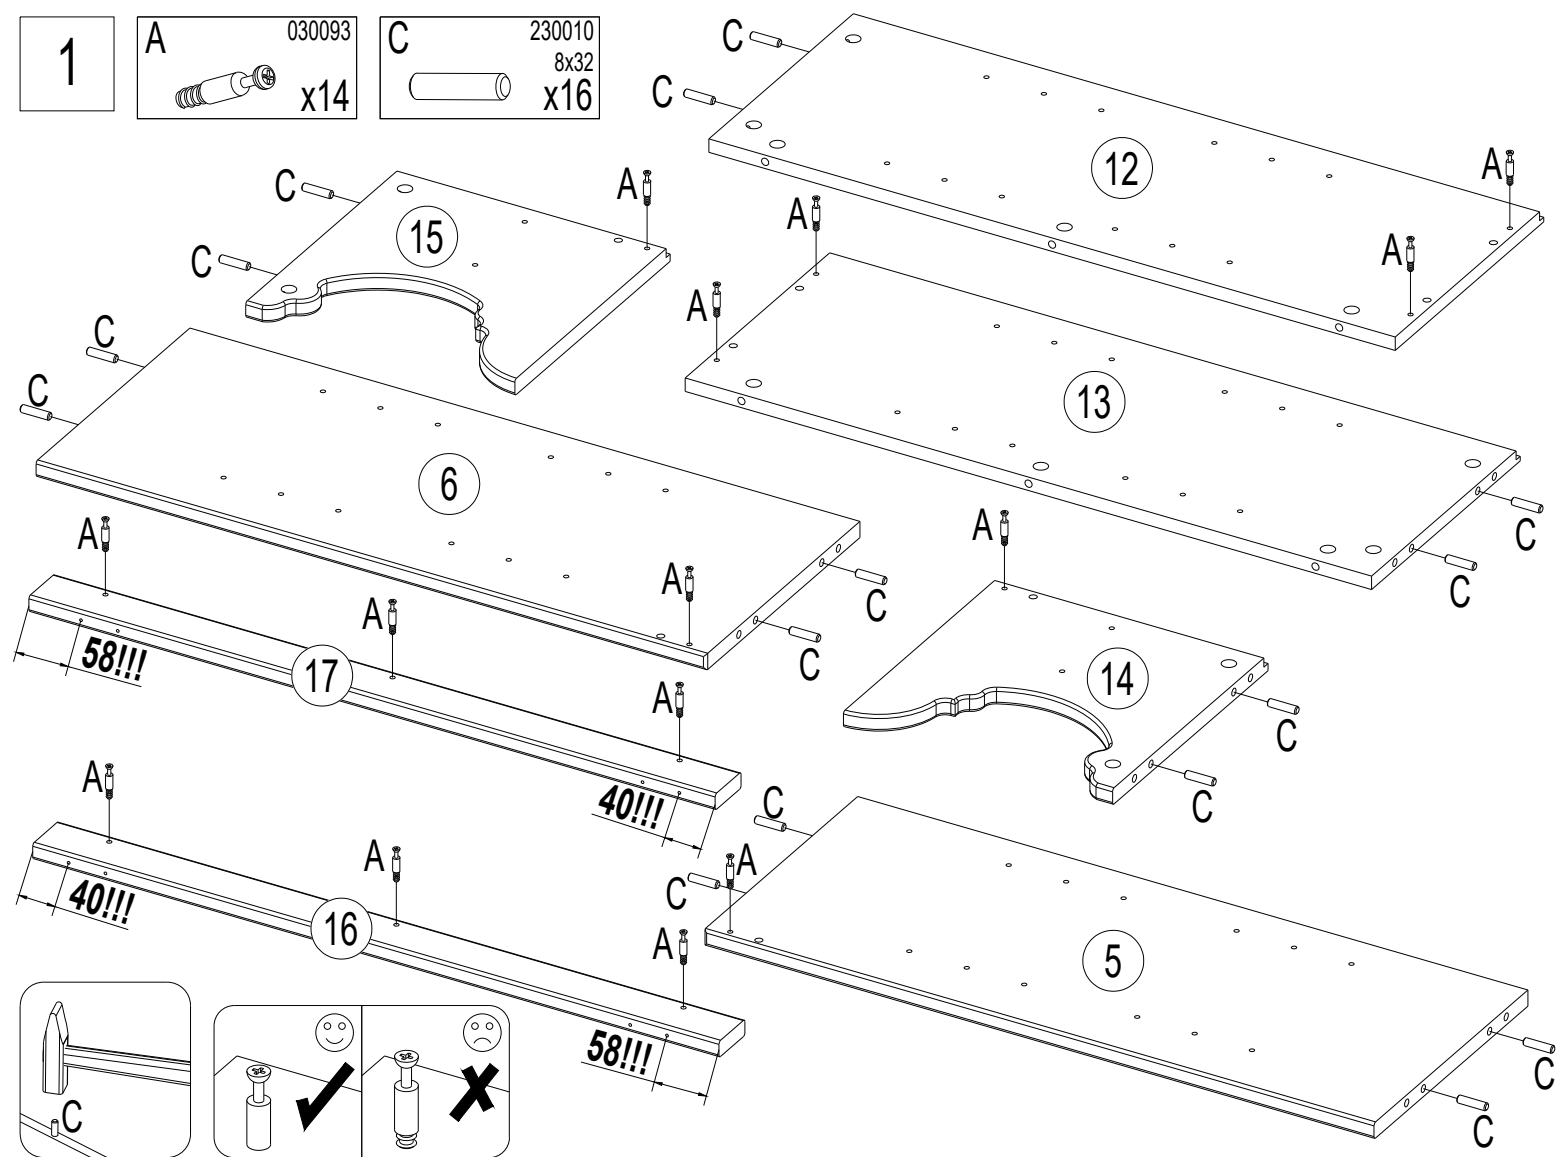





2

A 030093
x16

C 230010
8x32
x8



D(a) 110009/110011
x2

I 250013
3.5x15
x4

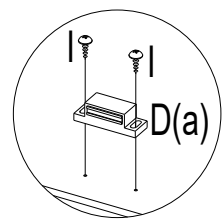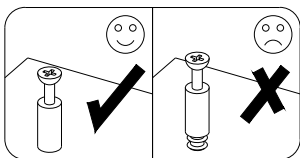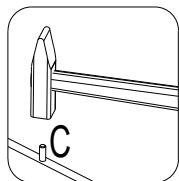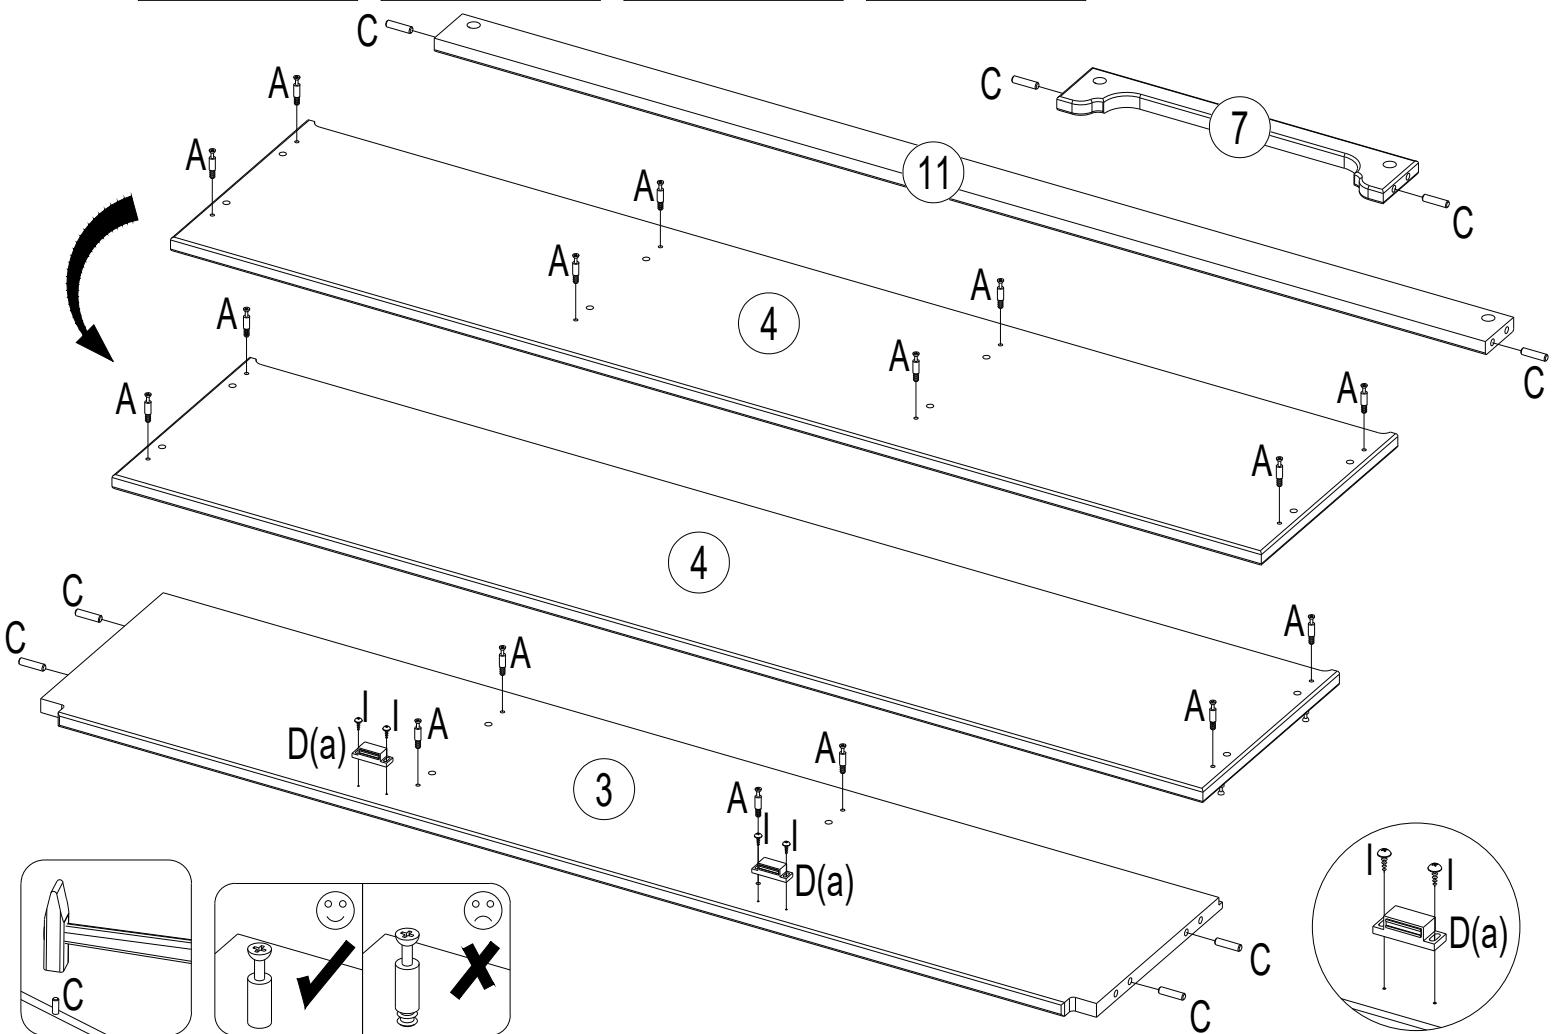

3

B 030110
x2

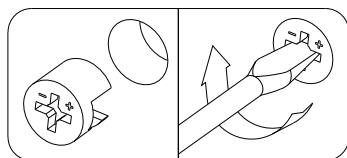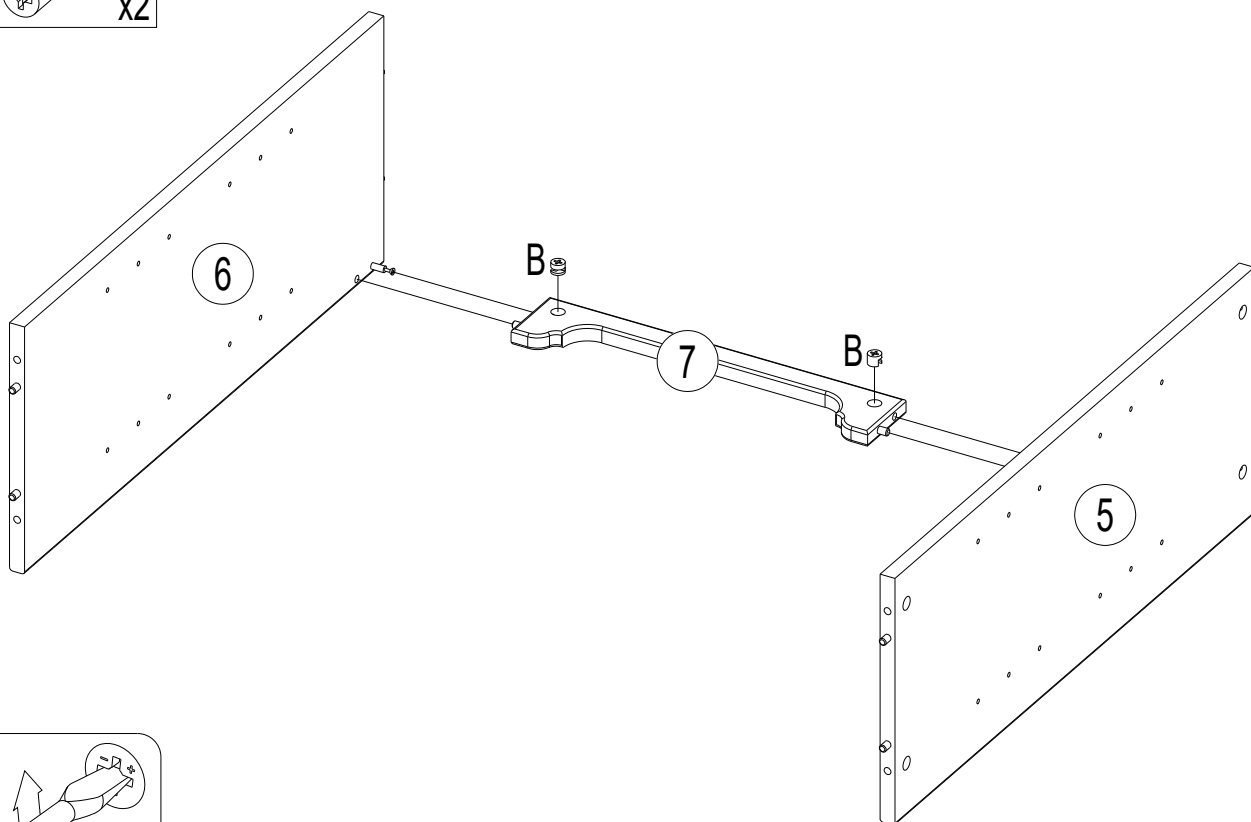



4

B

030110



x4

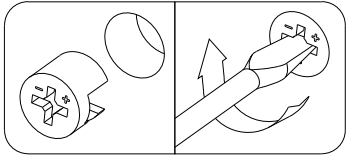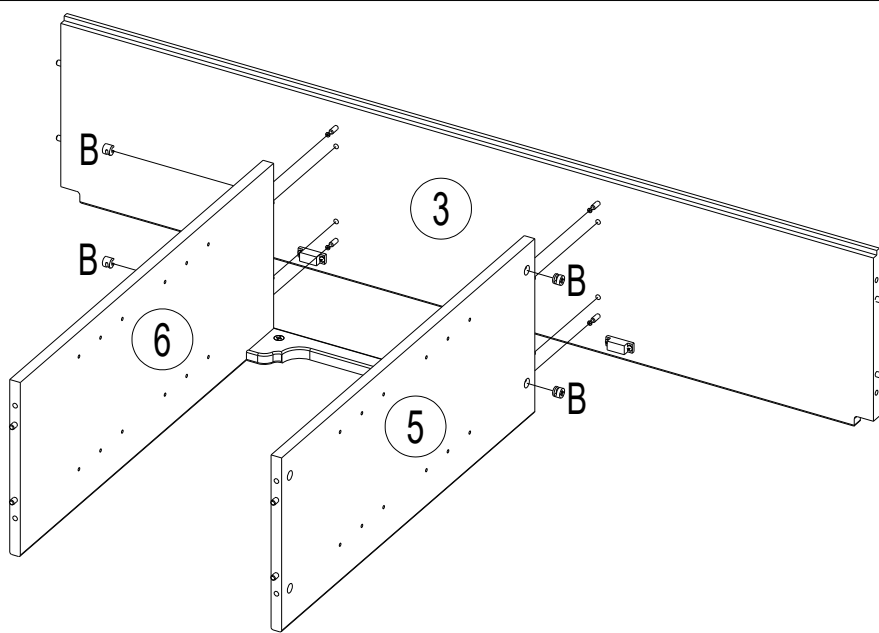



5

B

030110



x4

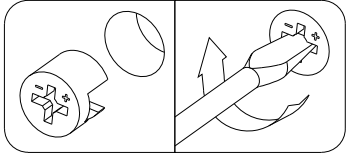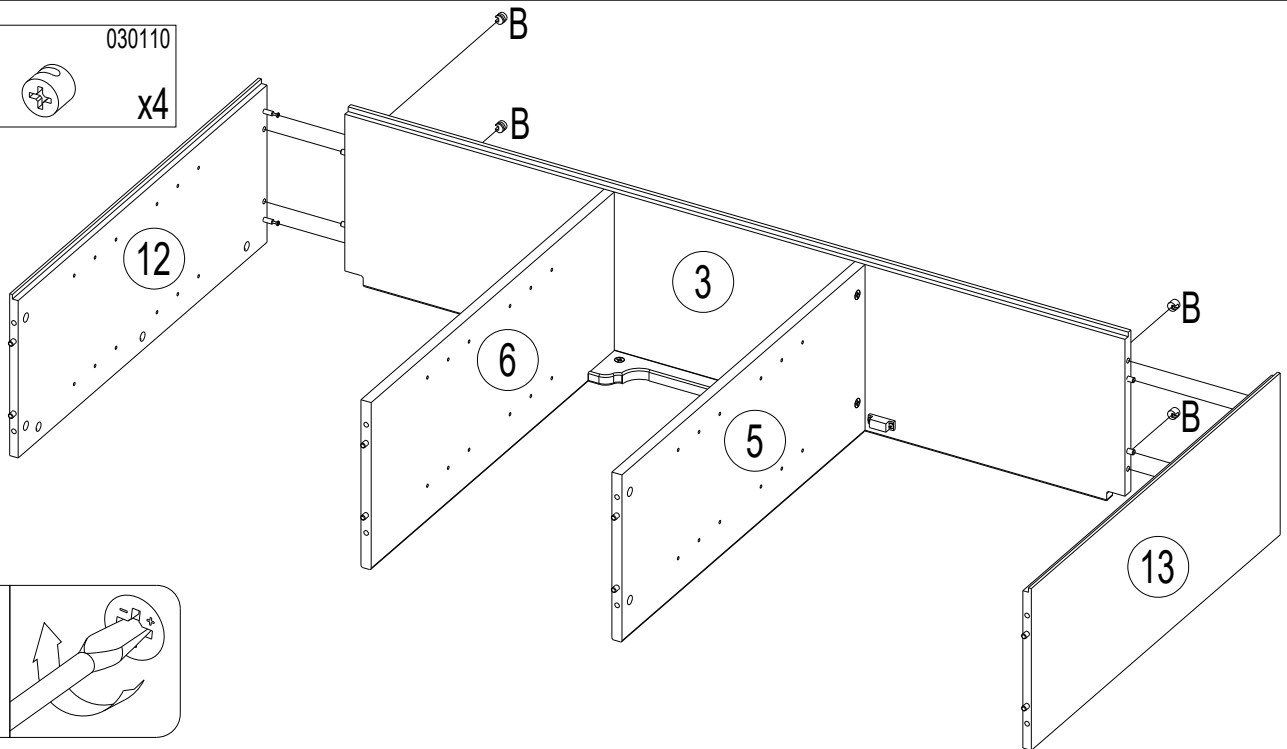



6

B


030110



x14

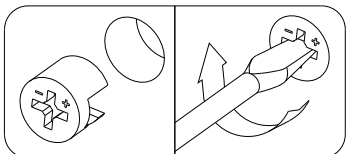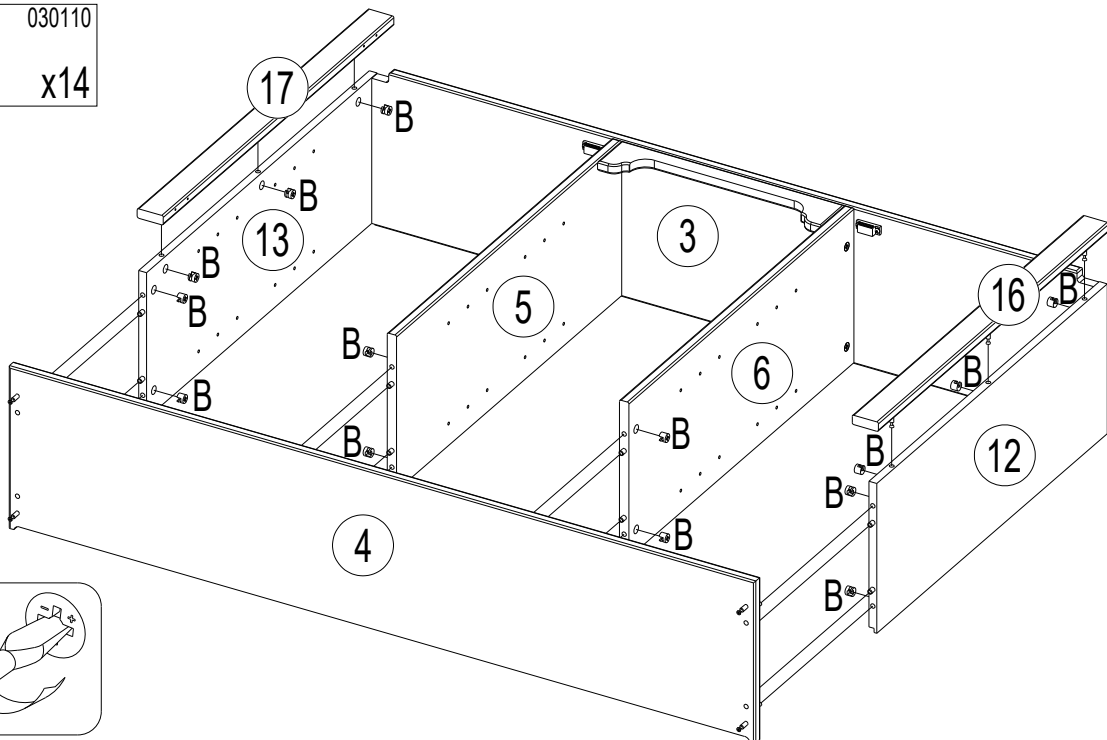


7

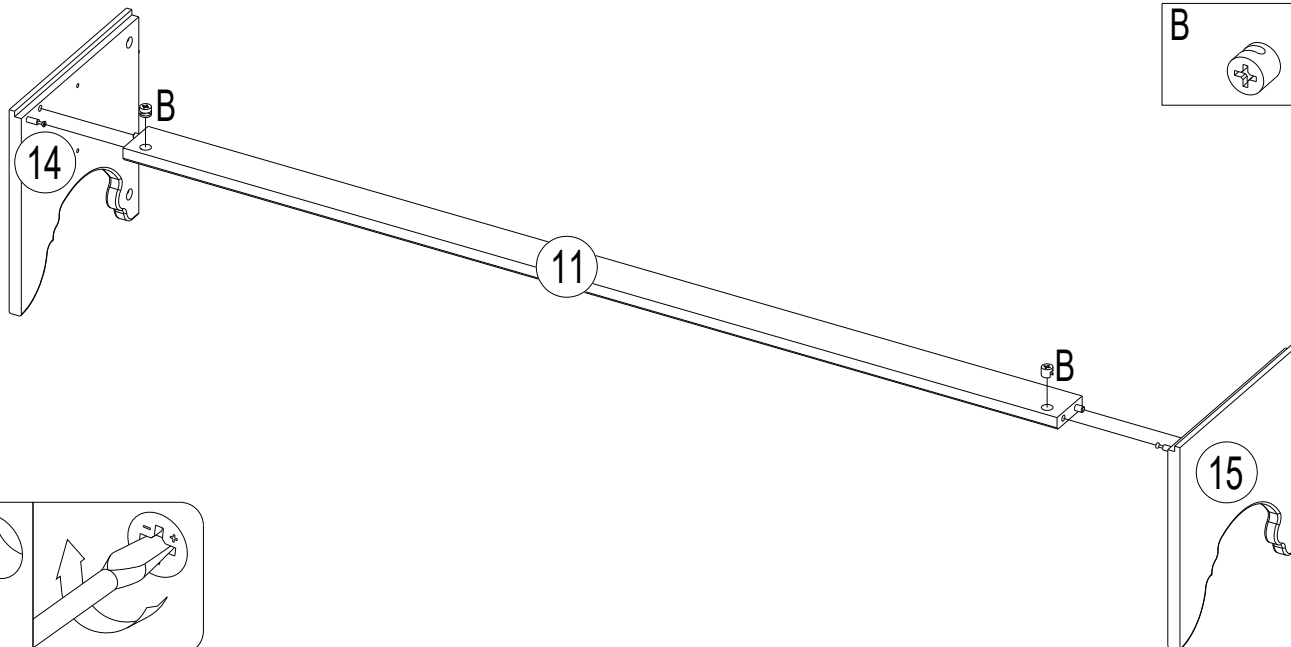


B 030110
x2

8

B 030110
x4

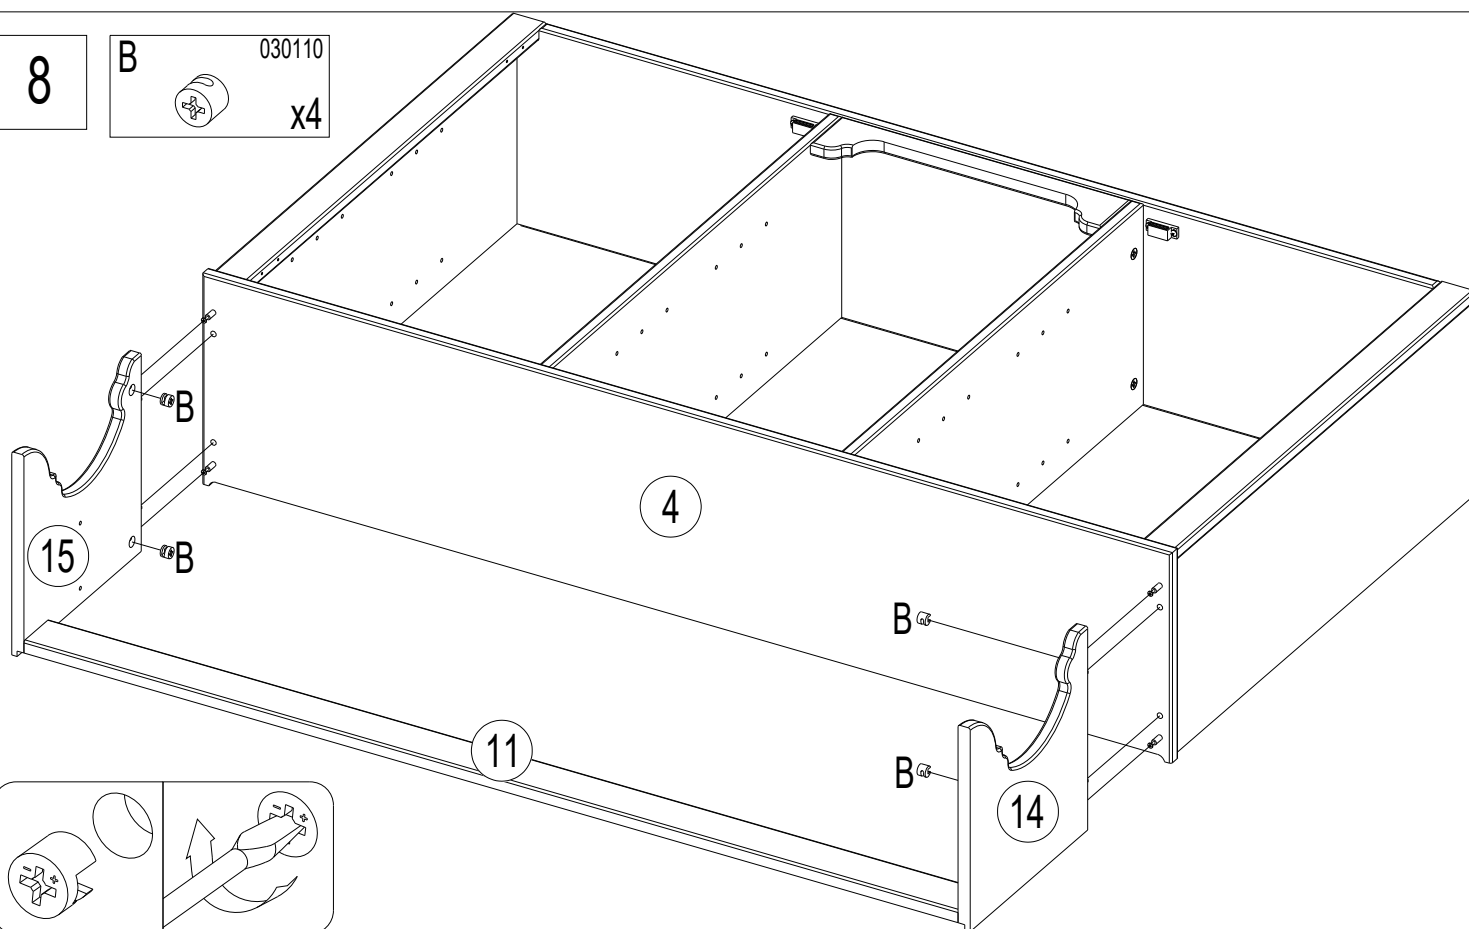

9

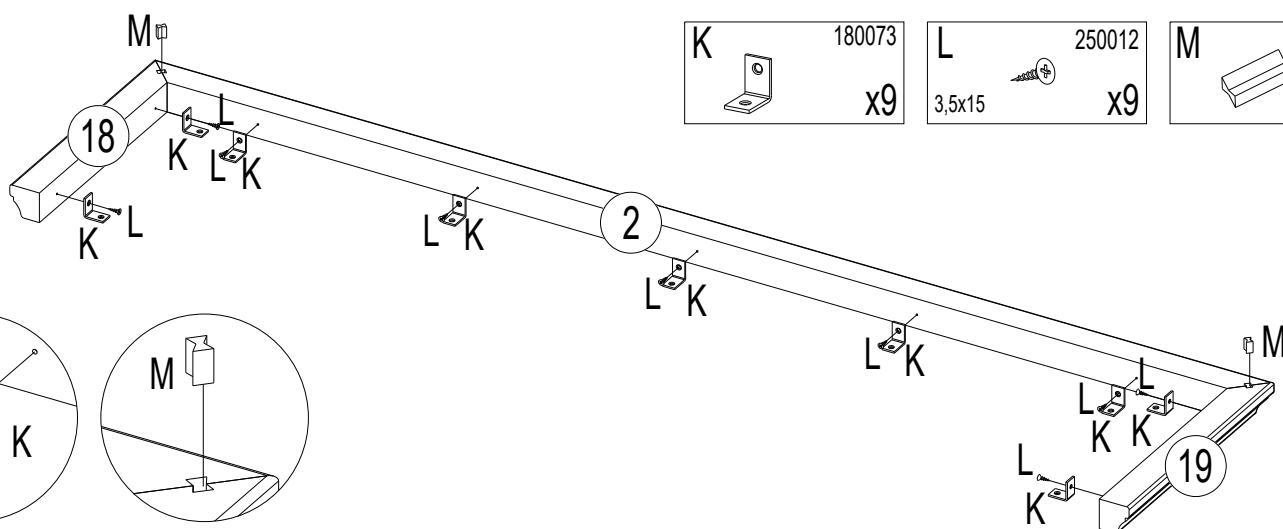

K 180073
x9

L 250012
3,5x15 x9




M 220018
L=15MM x2

10



C 230010 8x32 x2

L 250012 3,5x15 x9

O 220043 1,2x20 x3

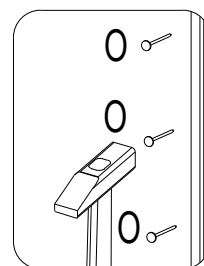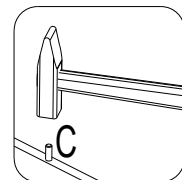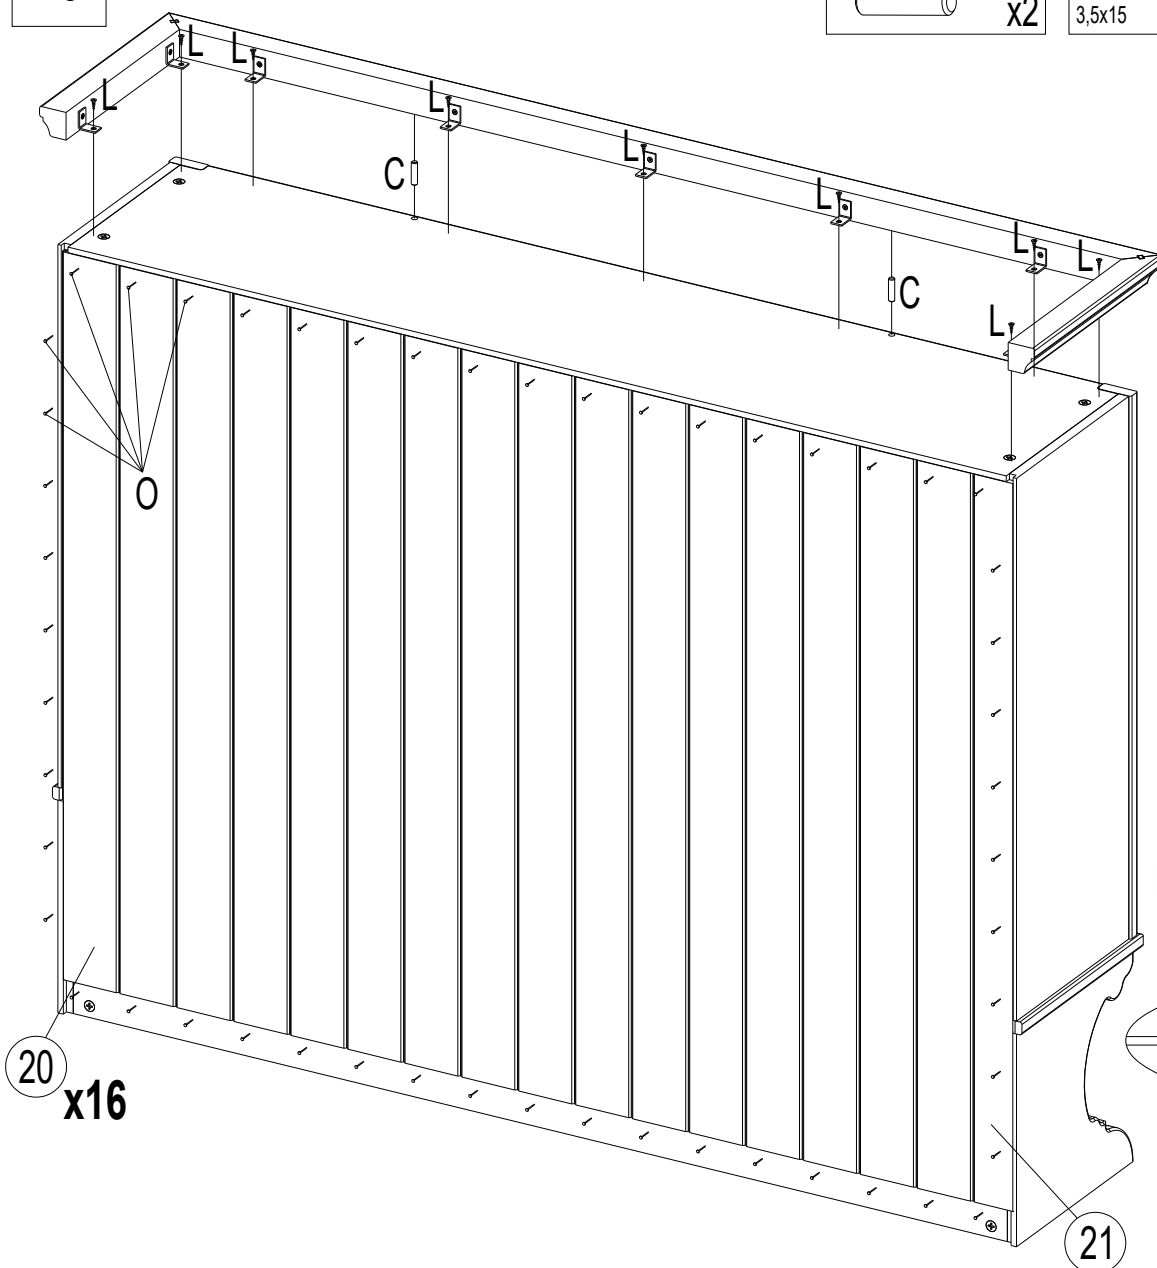

Произвести равномерную укладку,
затем выполнить фиксацию

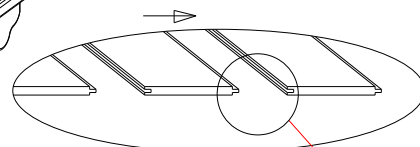

11

D(b) 110009/110011 x2


E 210143 x2

F 030052 M4x22 x4

H 180132 x4

J 250010 3,5x13 x4

N 250001 2,5x16 x8

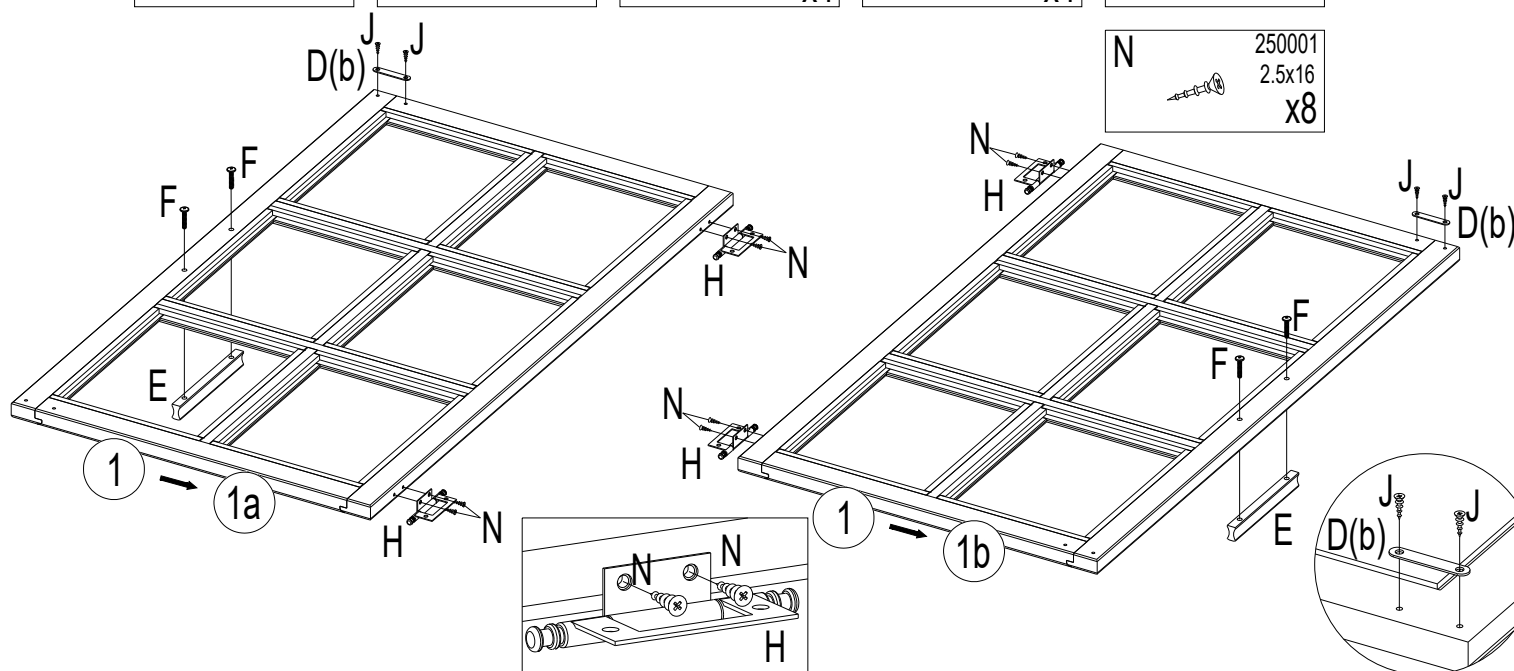

12

G



190011

x28


N




250001

2.5x16


x8

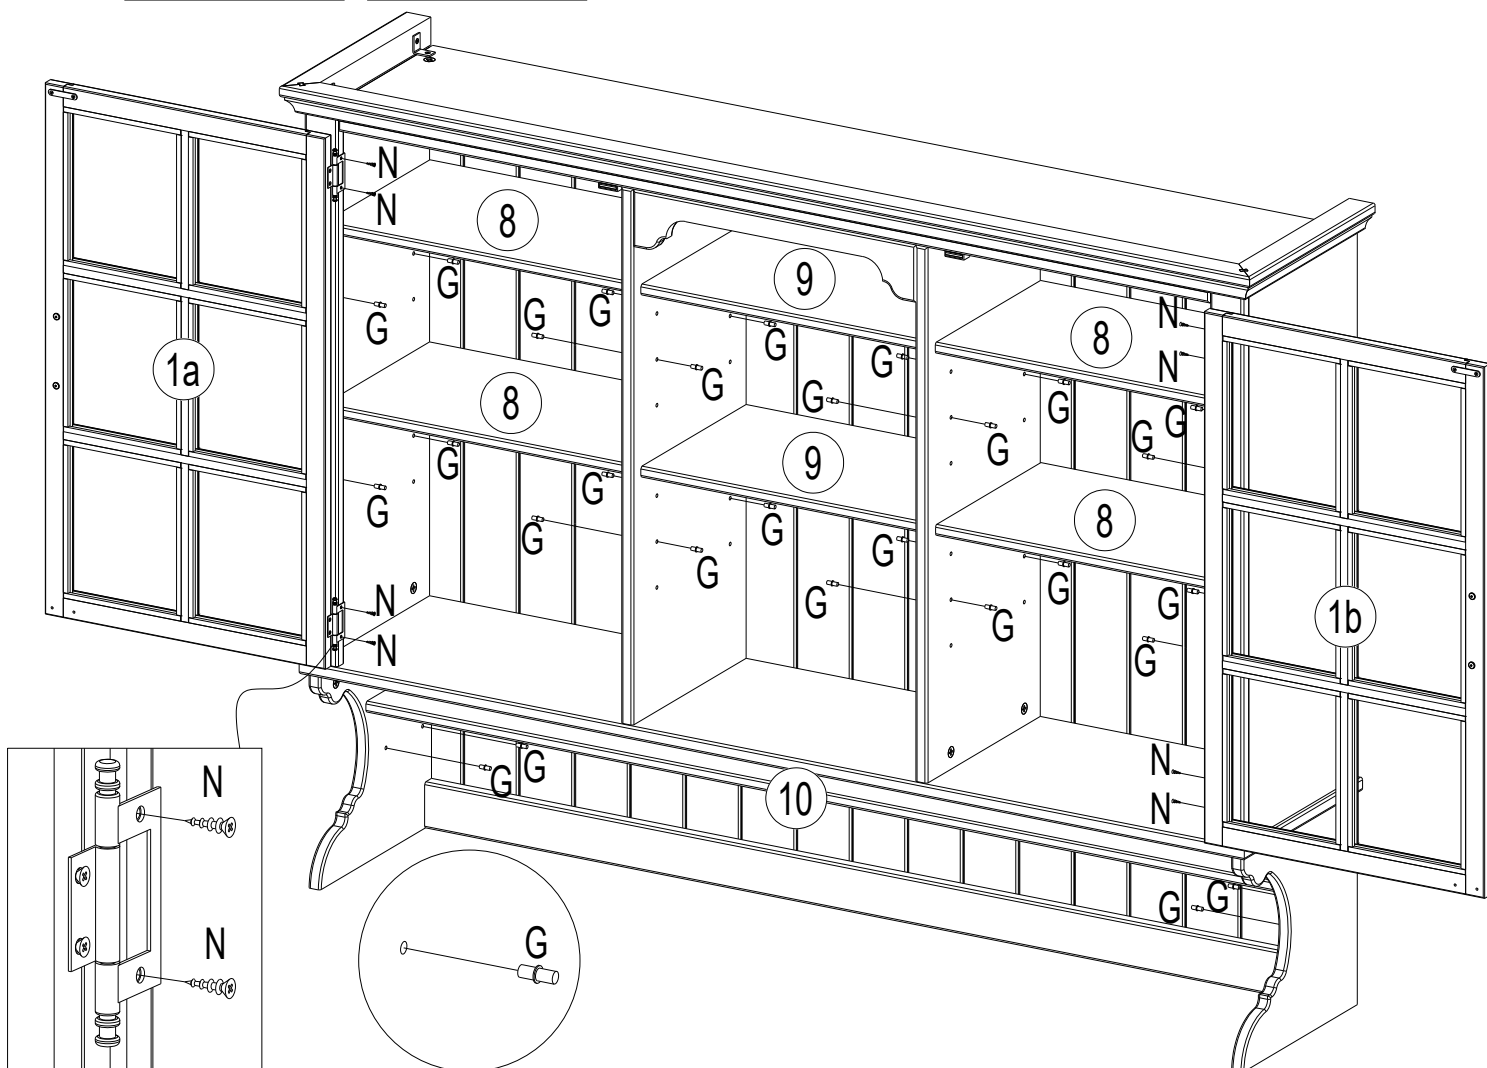

13

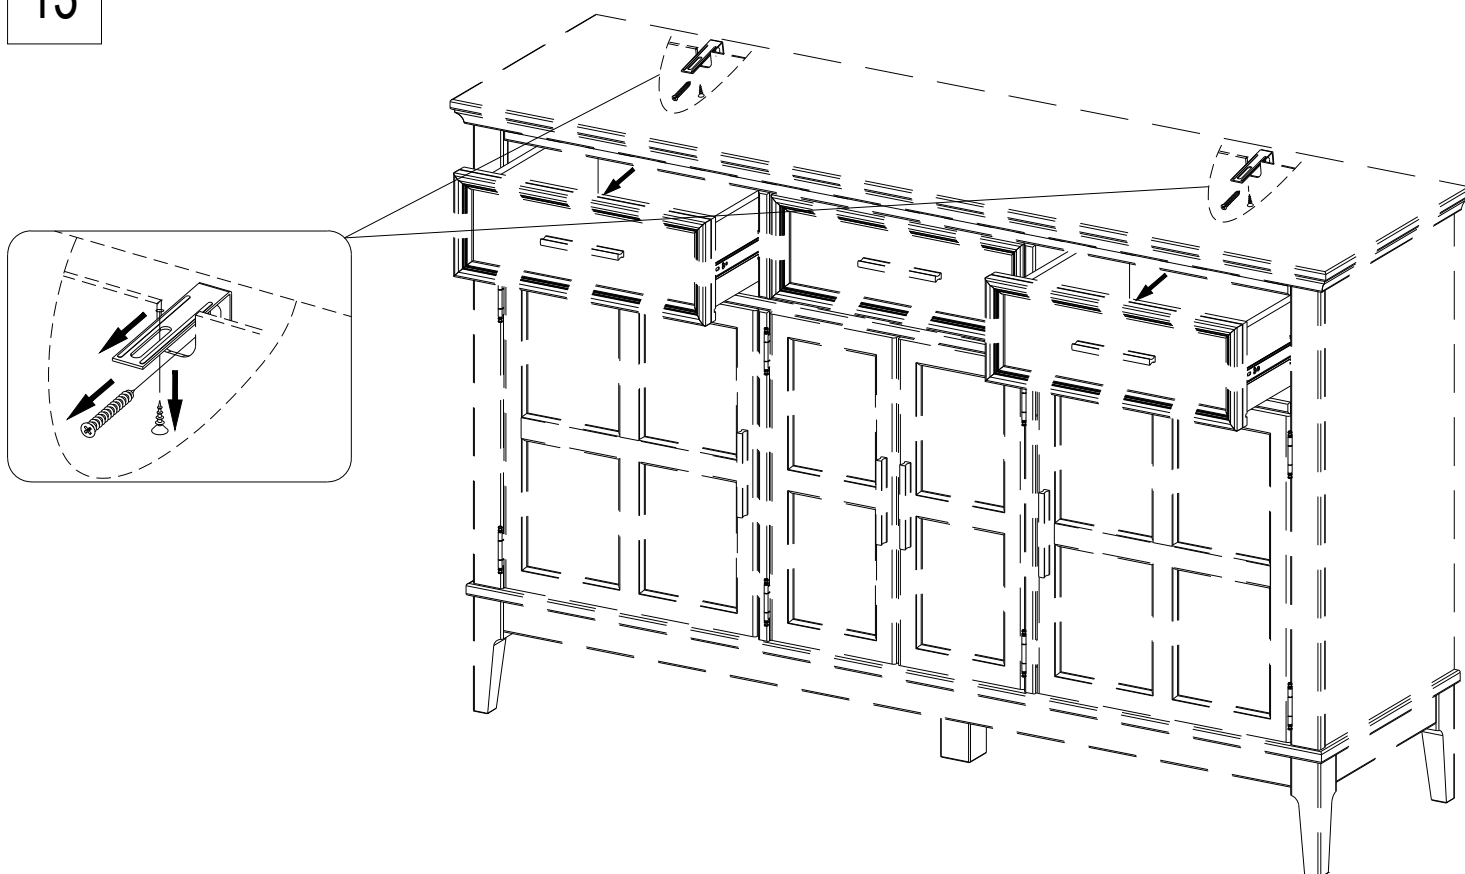

14

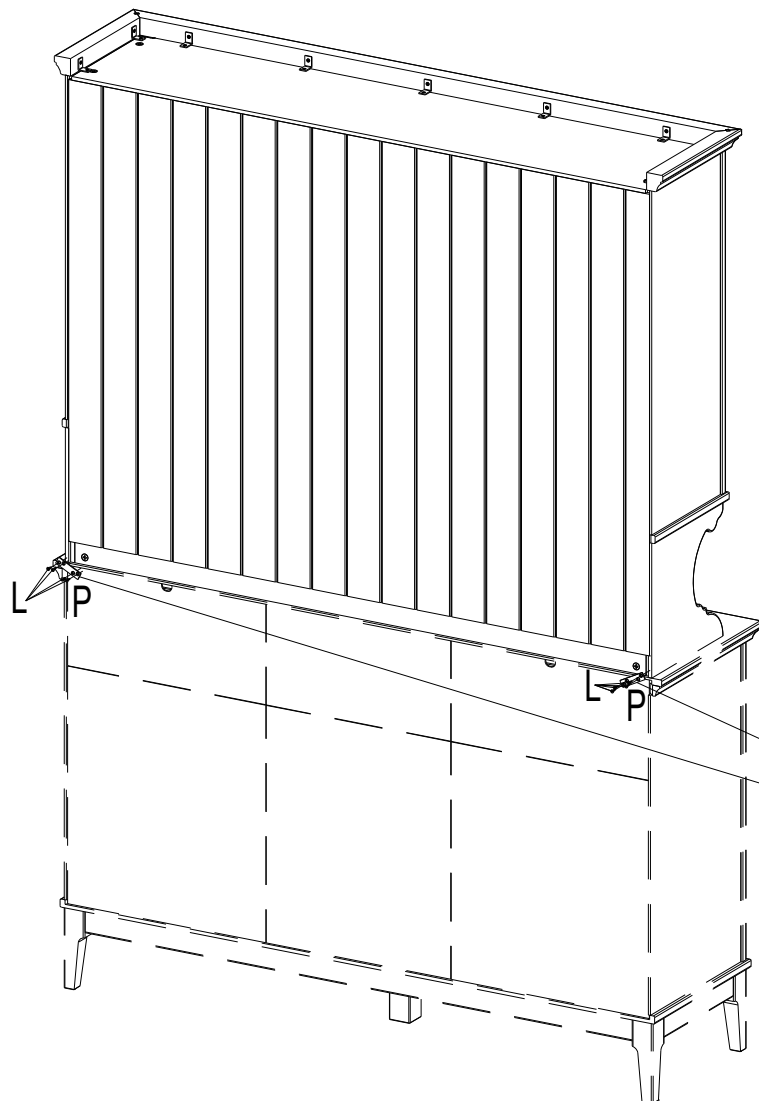

L 250012
3,5x15 x8

P 180017
x2

15

Z1 090004
8x40 x2

Z2 180080
76x31x15 x2

Z3 250012
3,5x15 x2

Z4 250044
4x40 x2

