

TURPEHEU





Conforama

NOTICE DE MONTAGE  
 ASSEMBLING INSTRUCTIONS  
 ISTRUZIONI DI MONTAGGIO  
 MONTAGEANLEITUNG  
 ISTRUÇÕES DE MONTAGEM  
 MANUAL DE MONTAJE  
 INSTRUCJA MONTAZU


# Vaisselleier PYRENEES II

03-05/2005

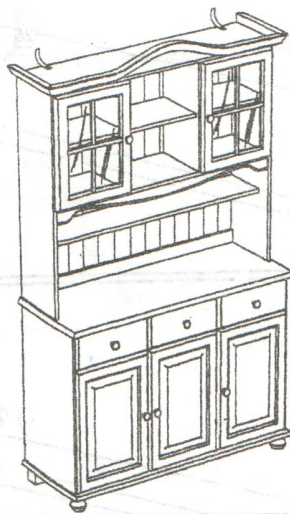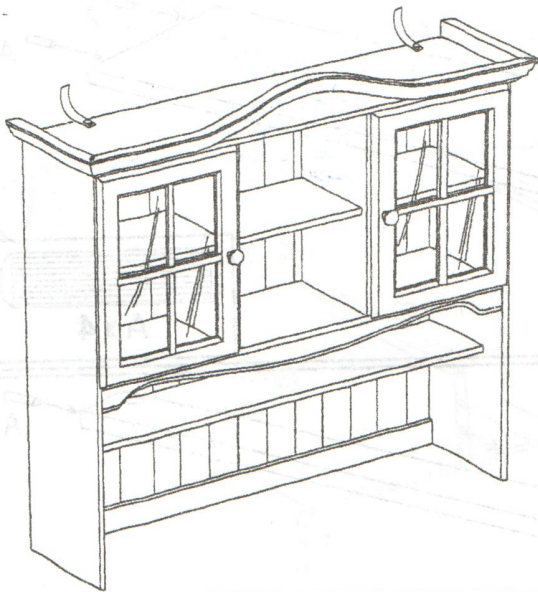

90 MIN

x2

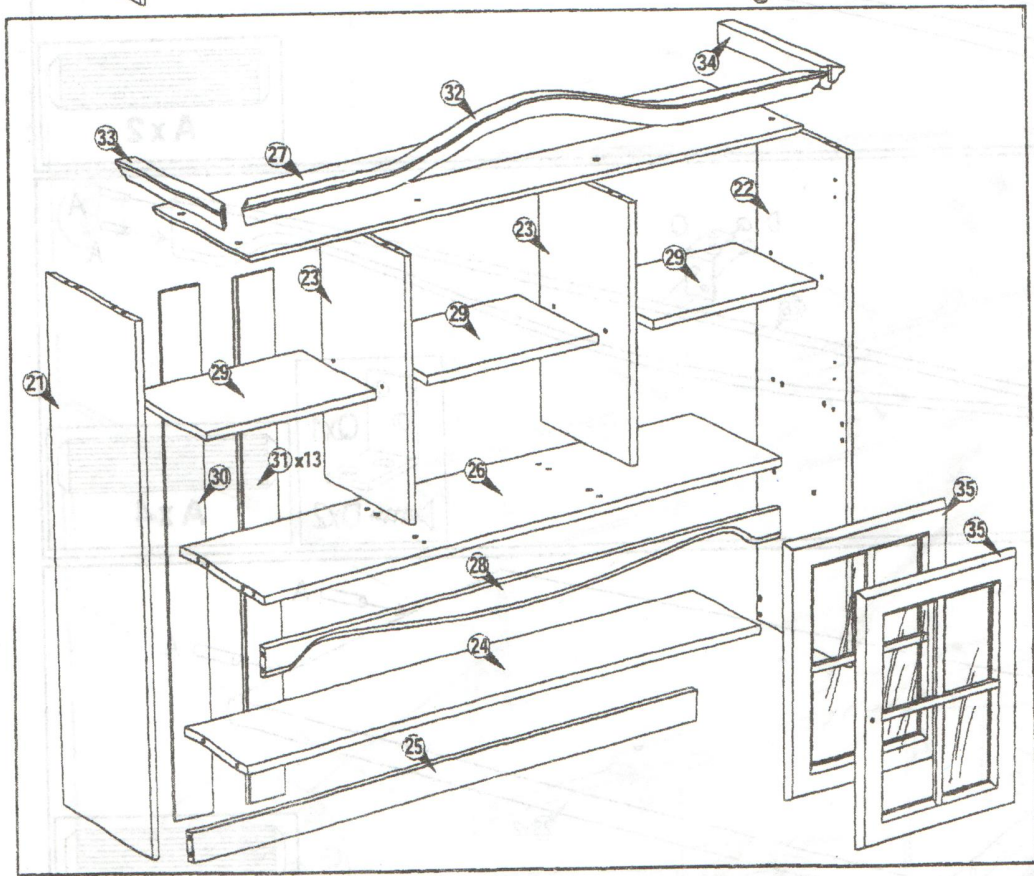

AVANT DE COMMENCER, SE REPORTER AUX CONSEILS DE MONTAGE EN ANNEXE

BEFORE STARTING, REFER TO THE ASSEMBLING ADVICE IN ANNEX

AVANTI DI COMMINCIARE, RIPORTATE AGLI CONSIGLI DI MONTAGGIO

VOR DIE MONTAGE, BITTE BEILIEGENDE ANWEISUNGEN FOLGEN


ANTES DE COMEÇAR, ADIAR-SE AOS CONSELHOS DE MONTAGEM EM ANEXO

ANTES DE EMPEZAR CONSULTE LOS CONSEJOS PARA EL MONTAJE


PRZED ROZPOCZECIEM ZAPOZNAC SIE ZALACZONA INSTRUCJA MONTAZU

Ax26 	Cx4 	Dx44 	Ex6 	Fx6 	Gx12 	Hx46 	Ix2 	Jx2 
Kx4 	Lx12 	Nx1 	Ox2 	Px2 	Qx5 	Rx2 		


1

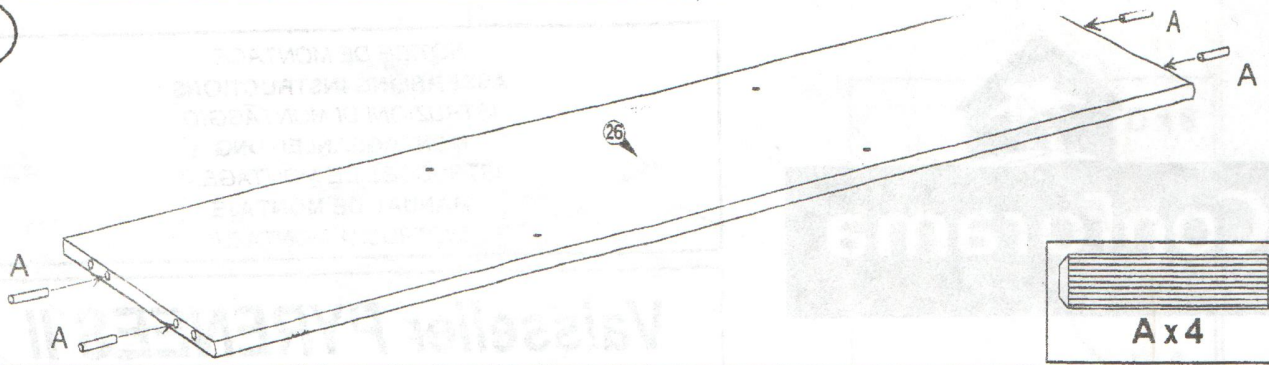


2

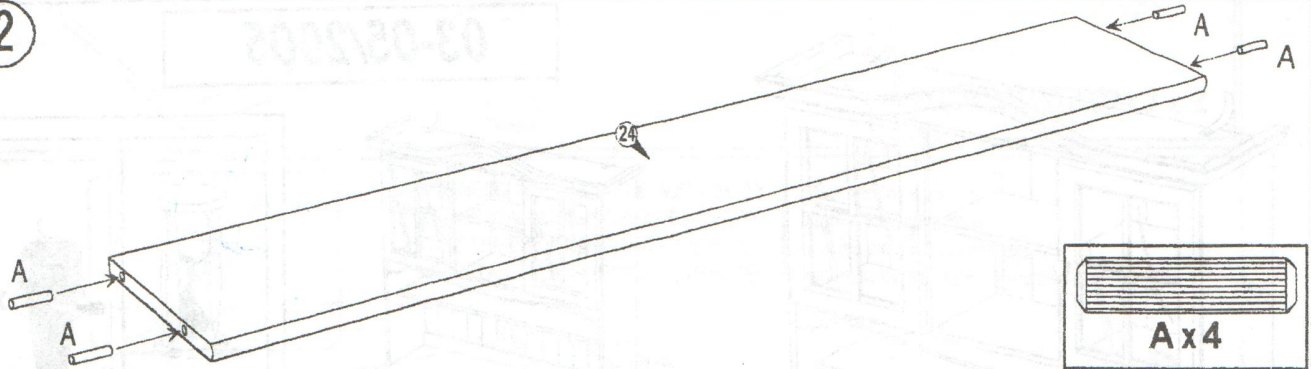


3



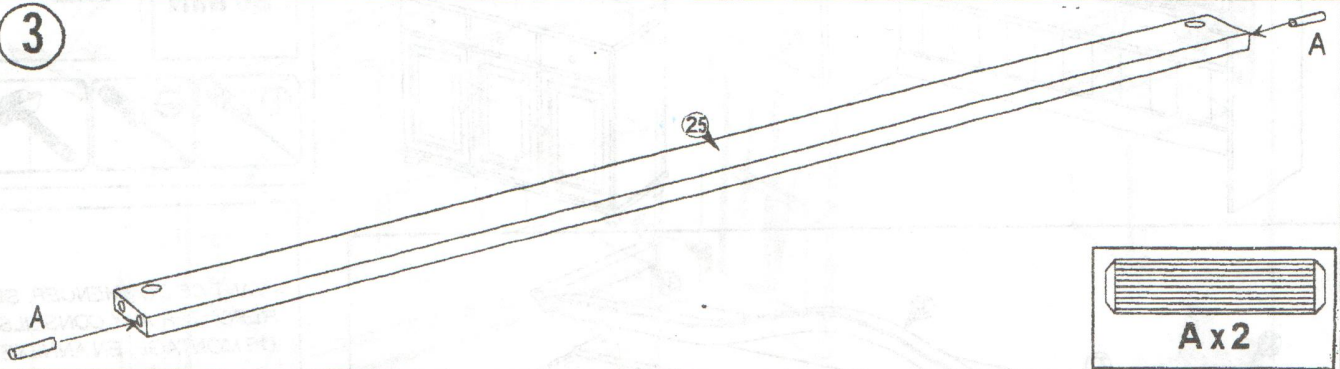





4

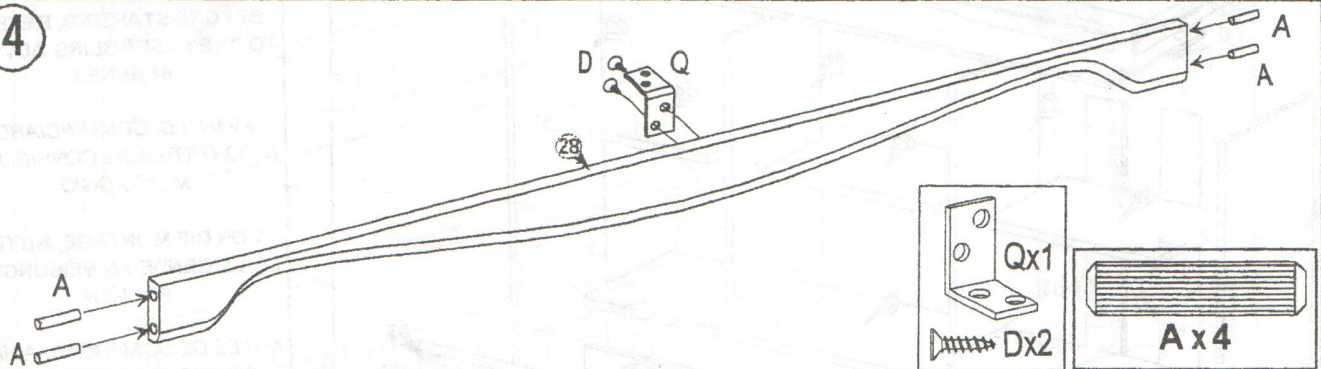







5

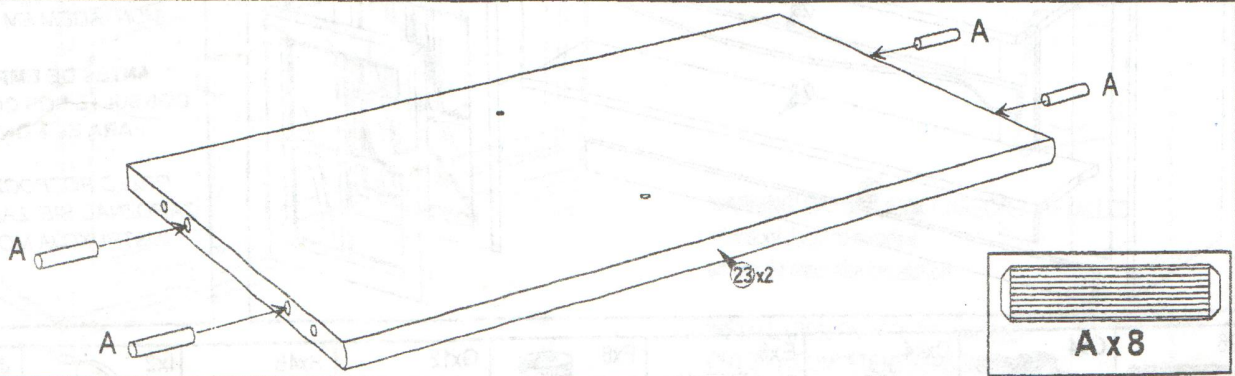

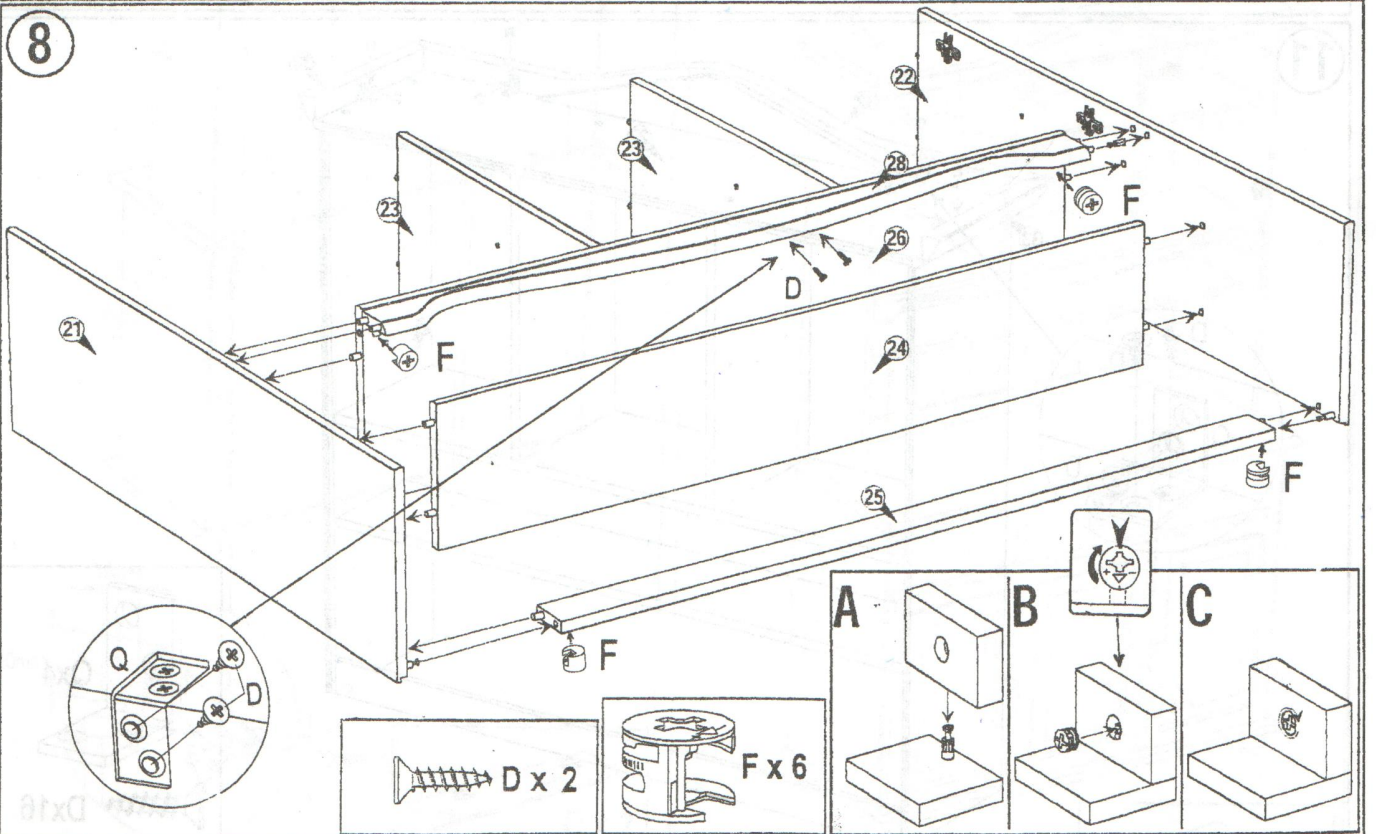
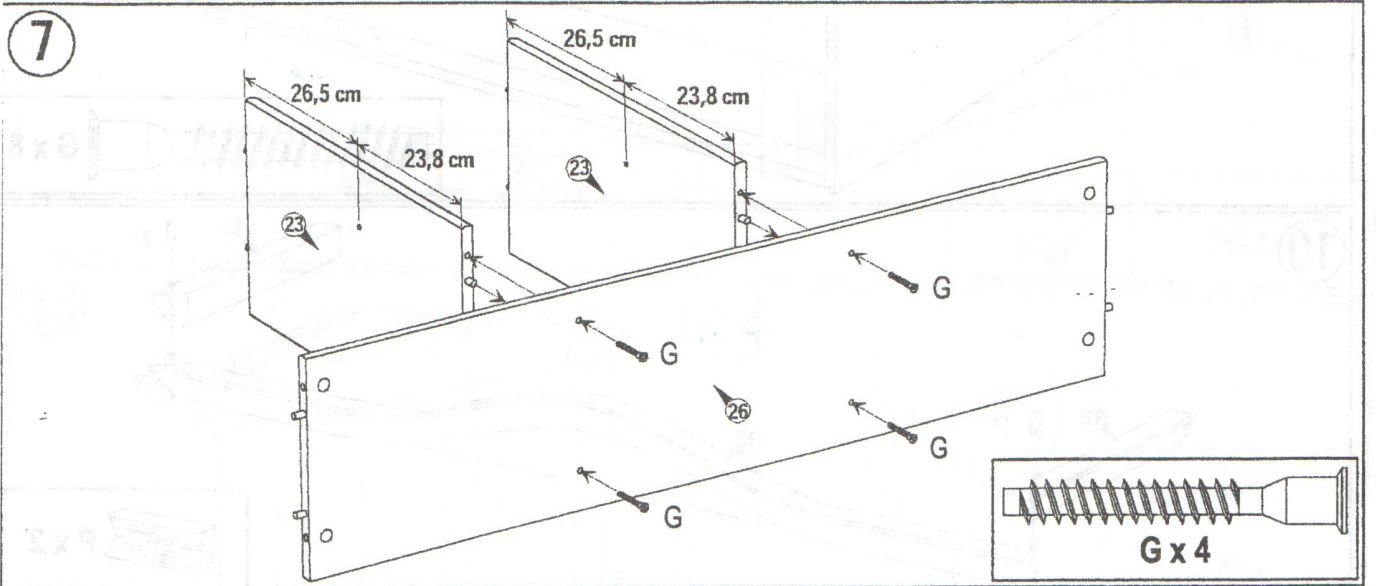
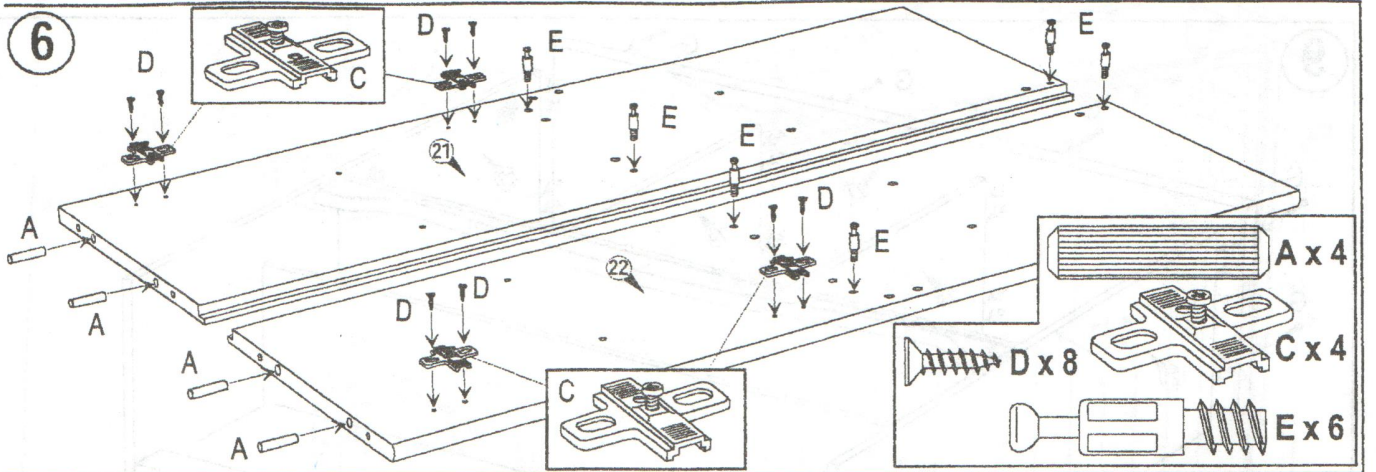


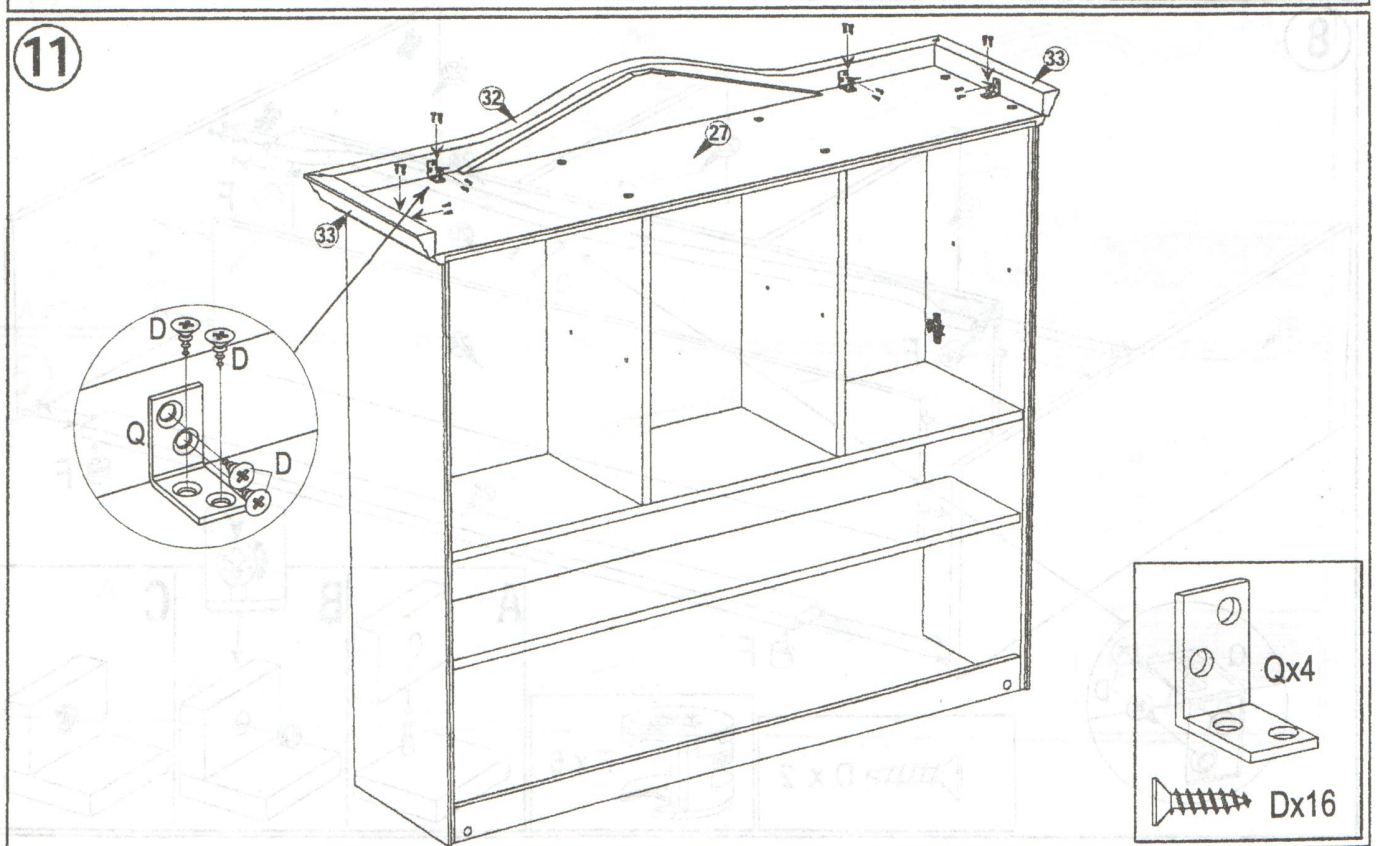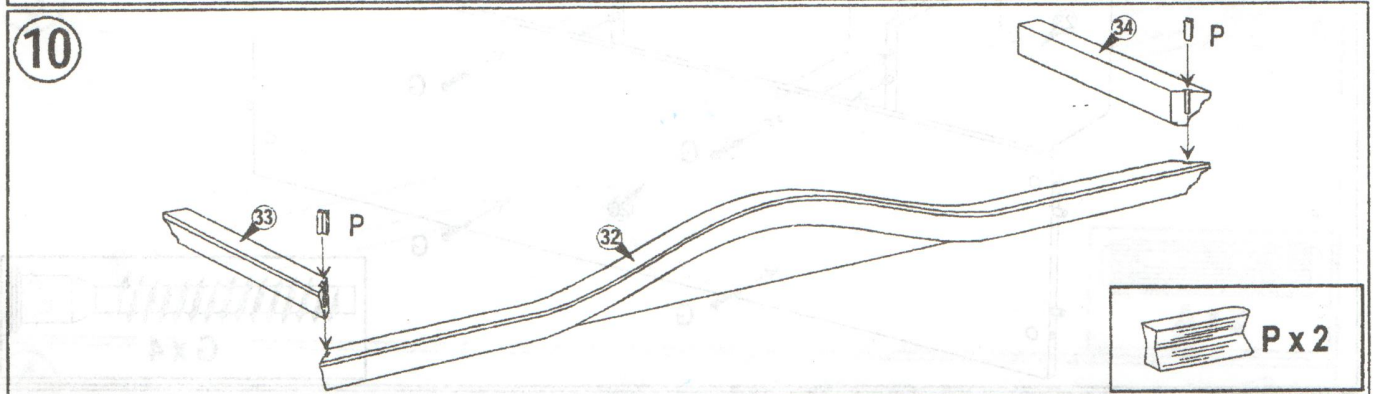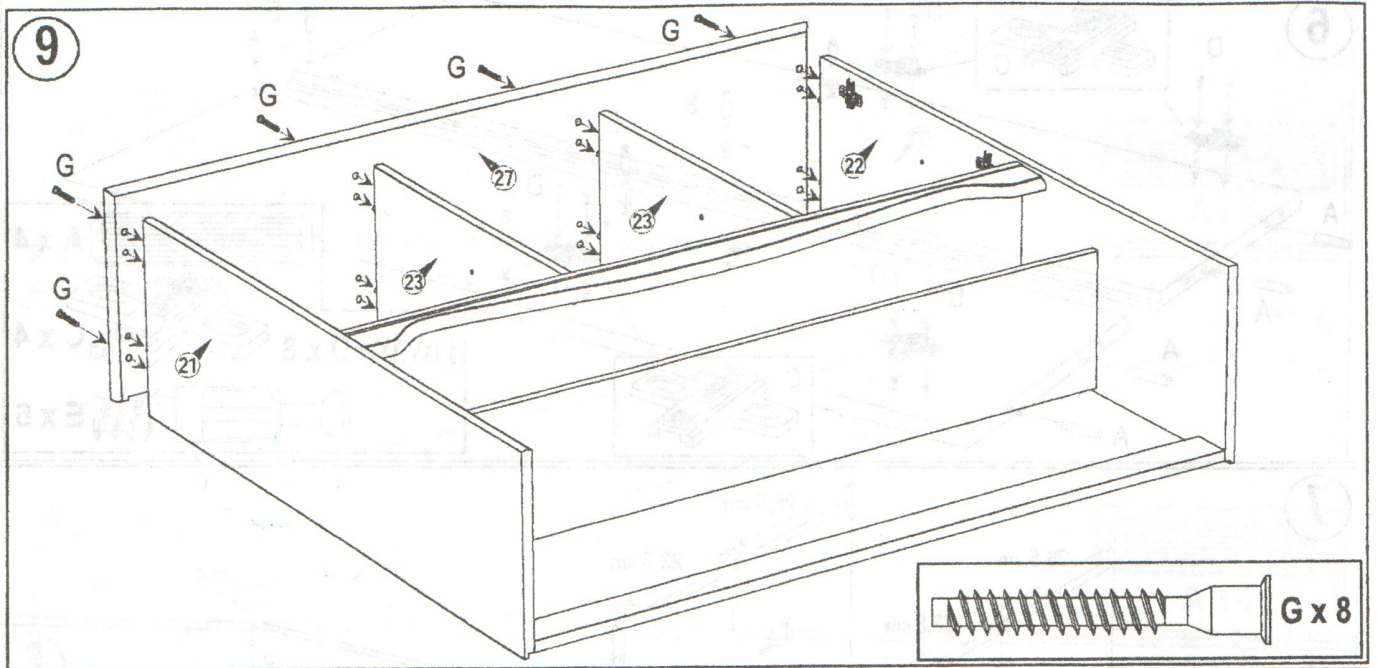



12

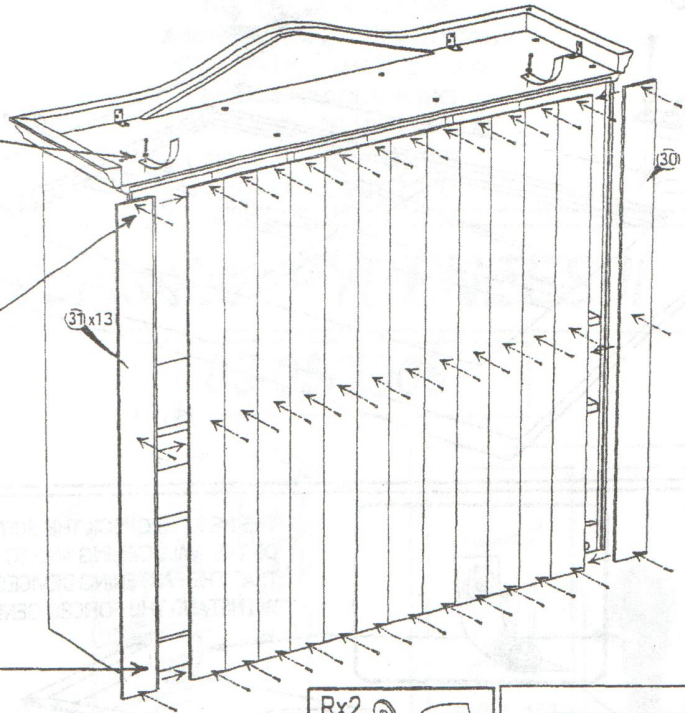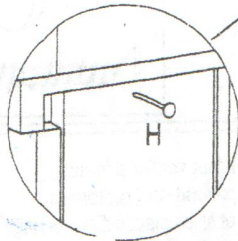
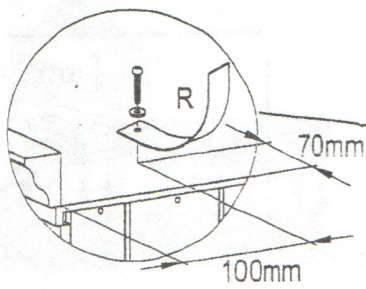


13






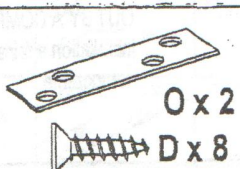
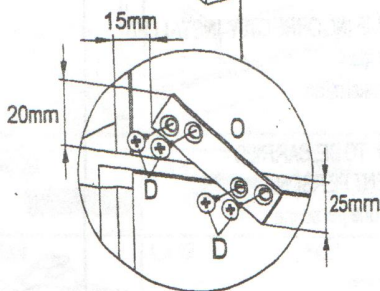
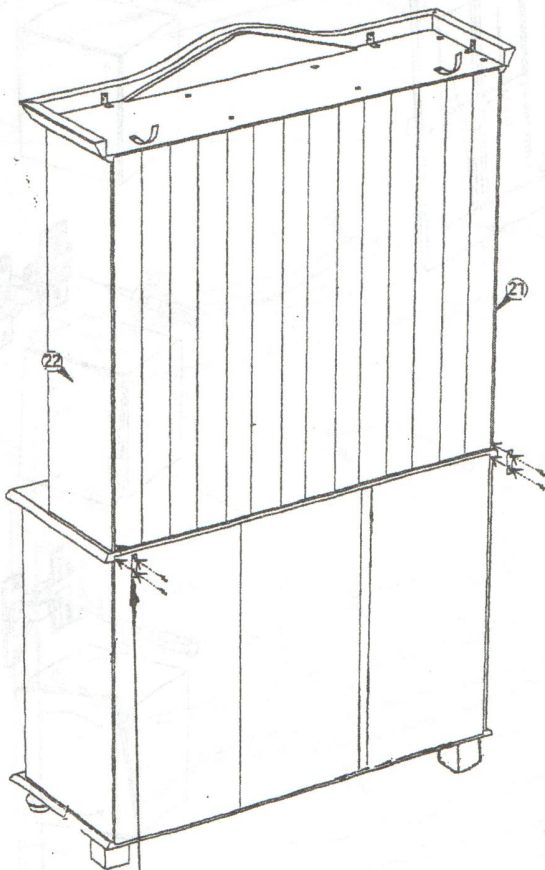






14

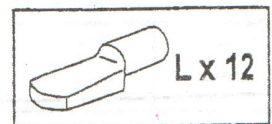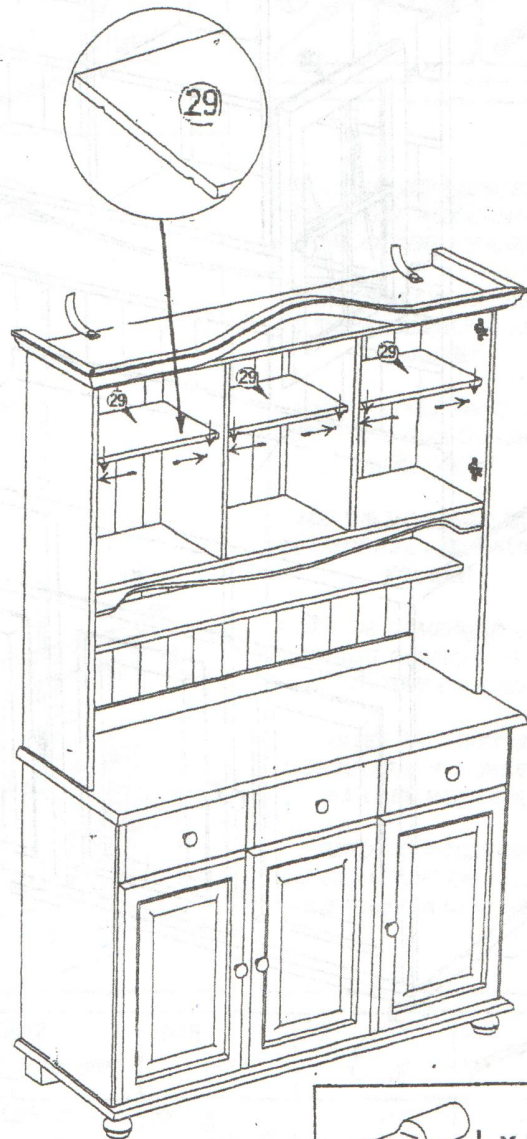



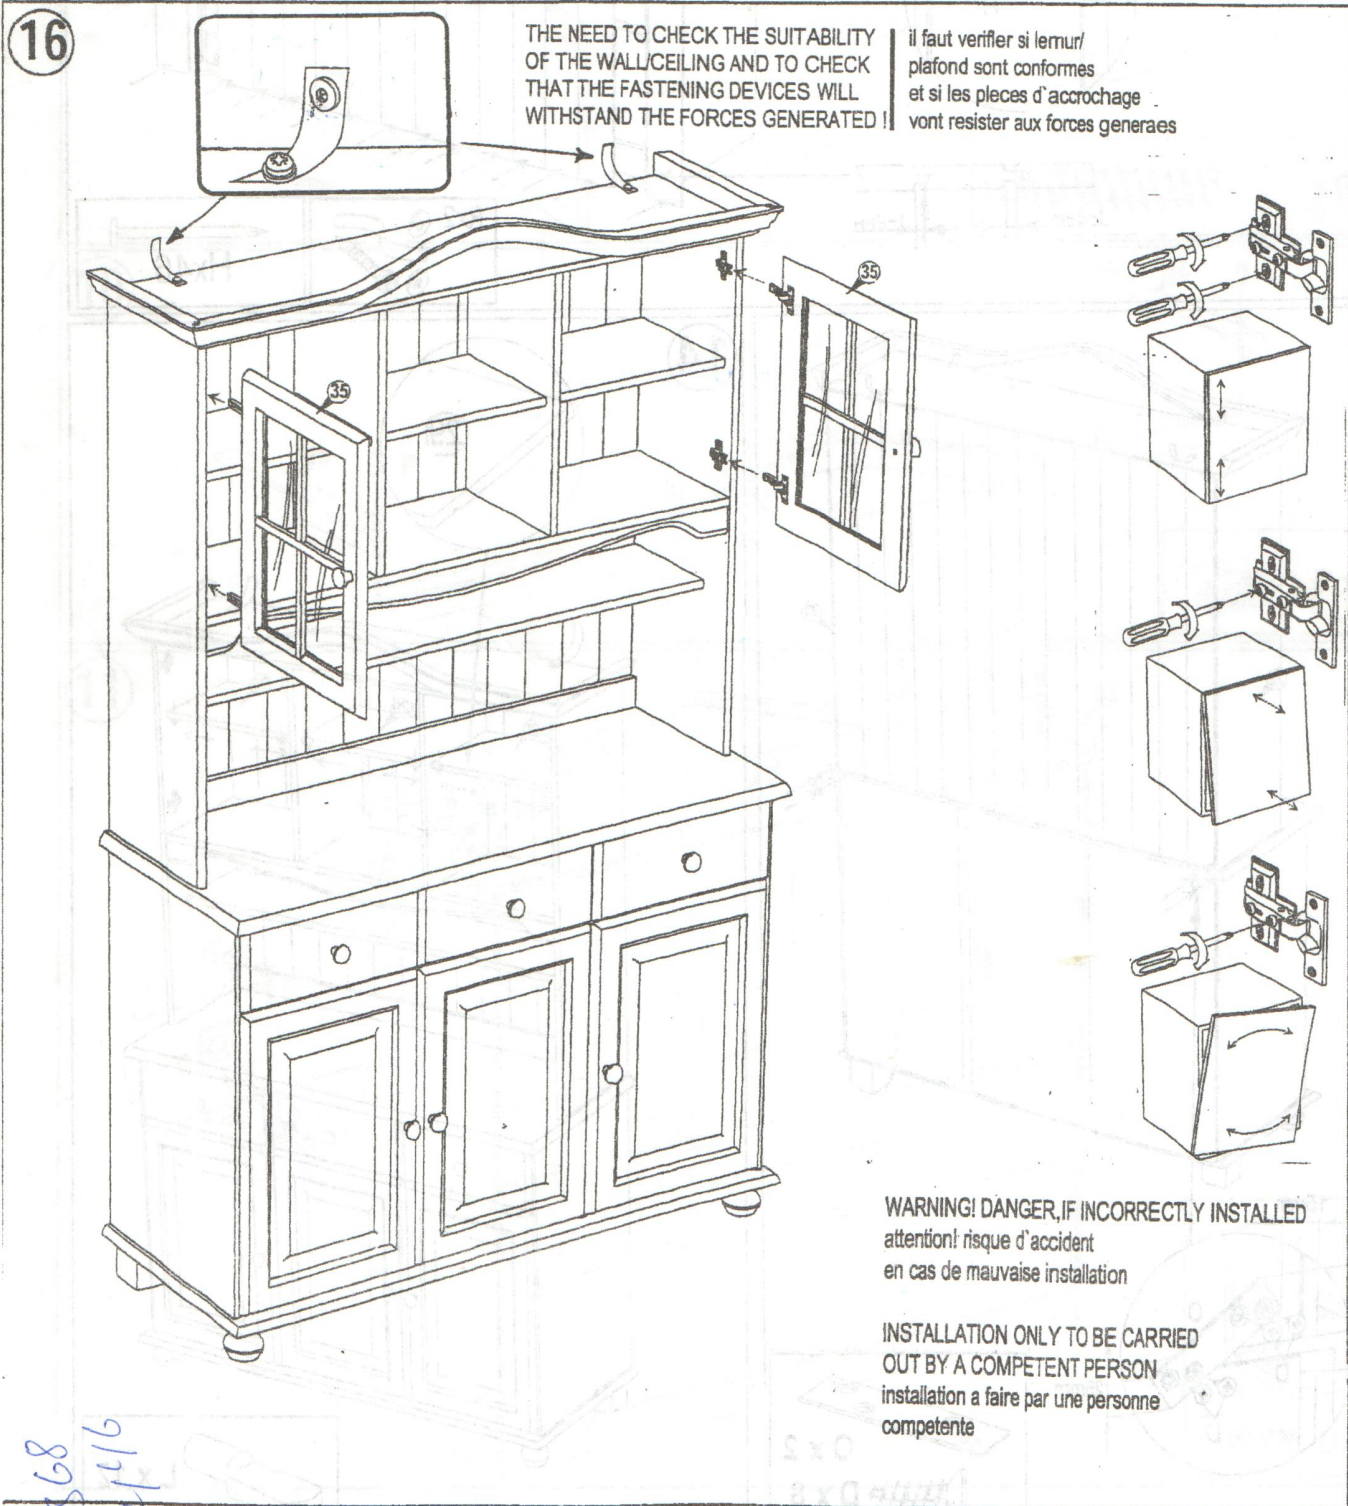
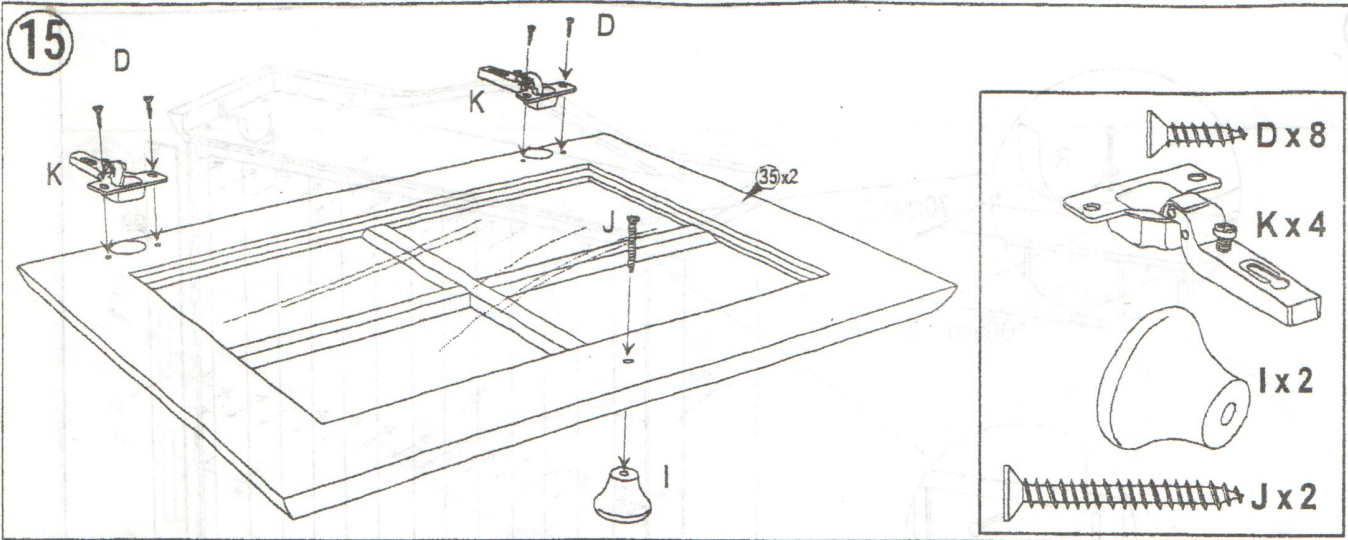


7368  
4/16

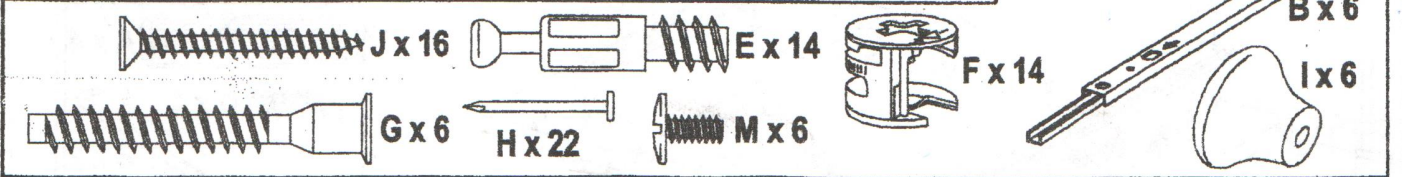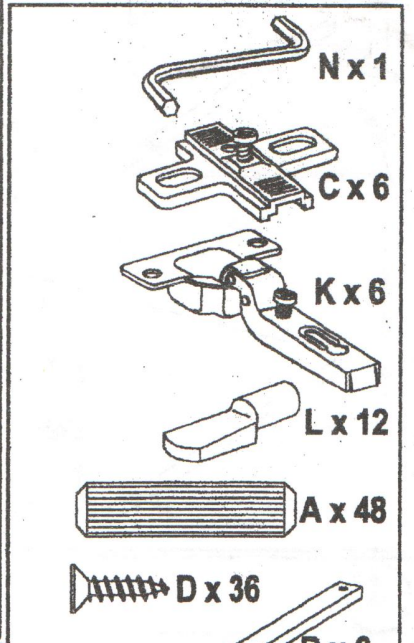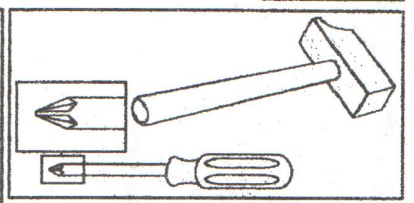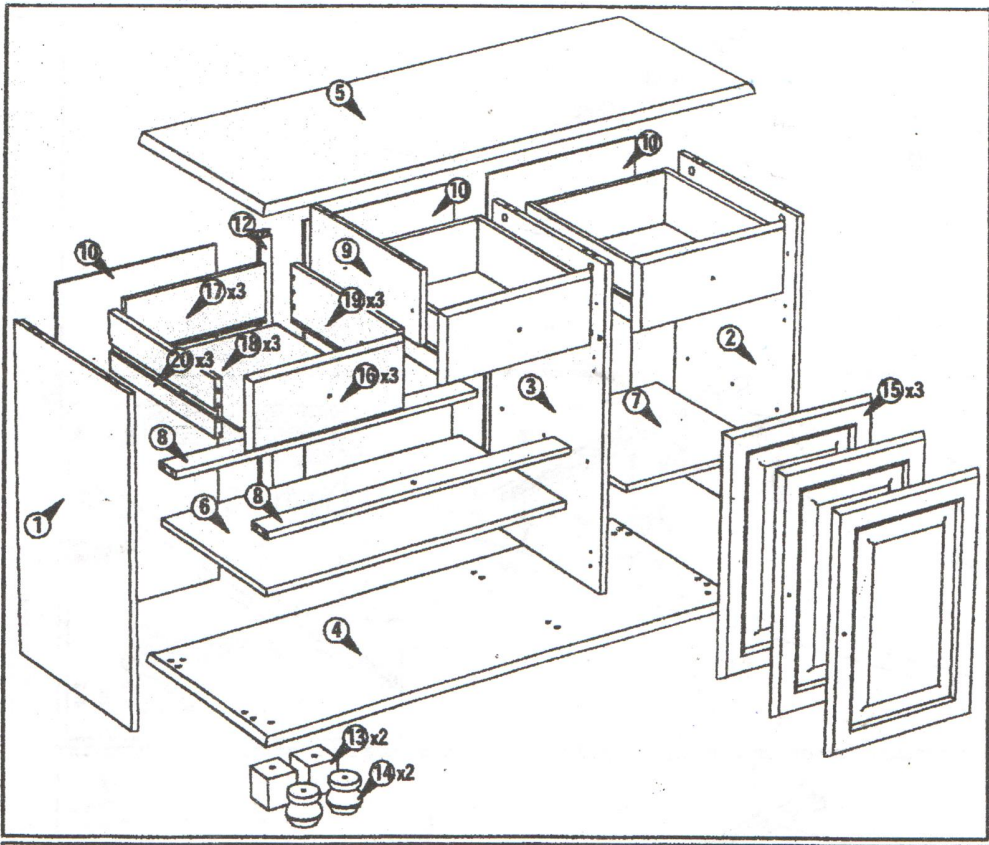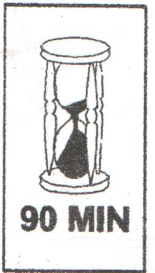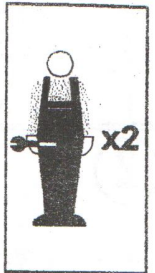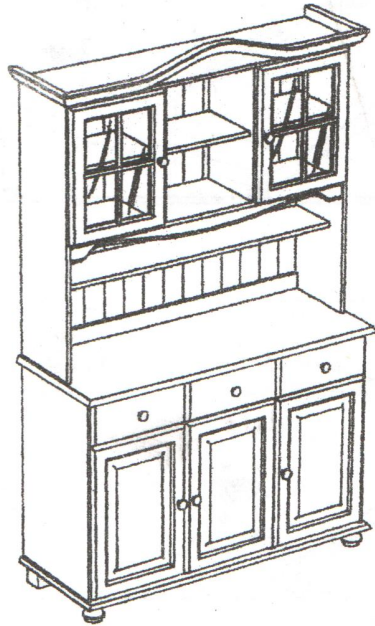
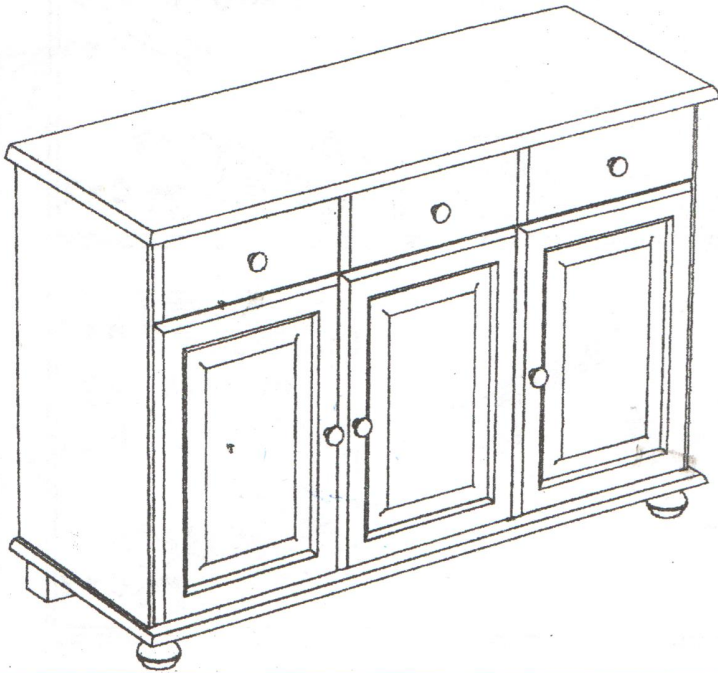


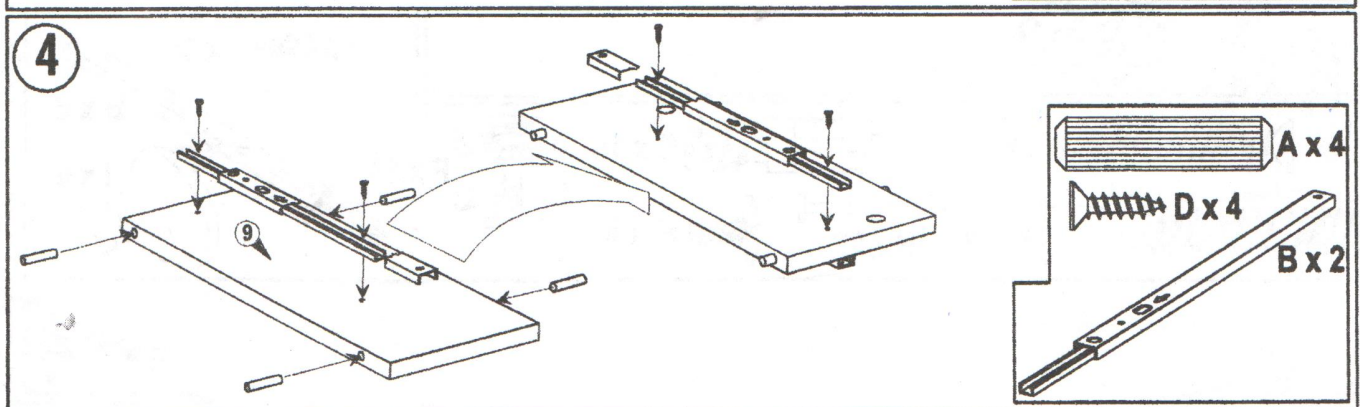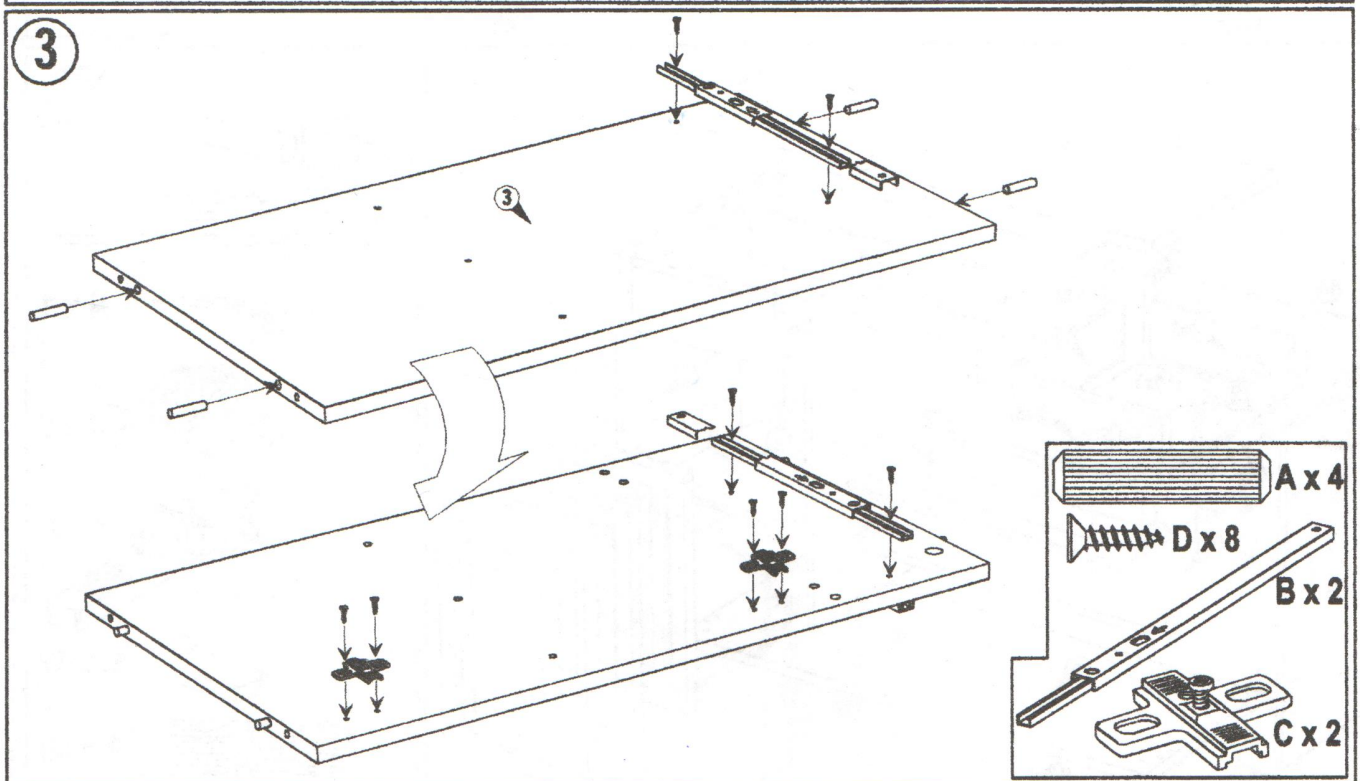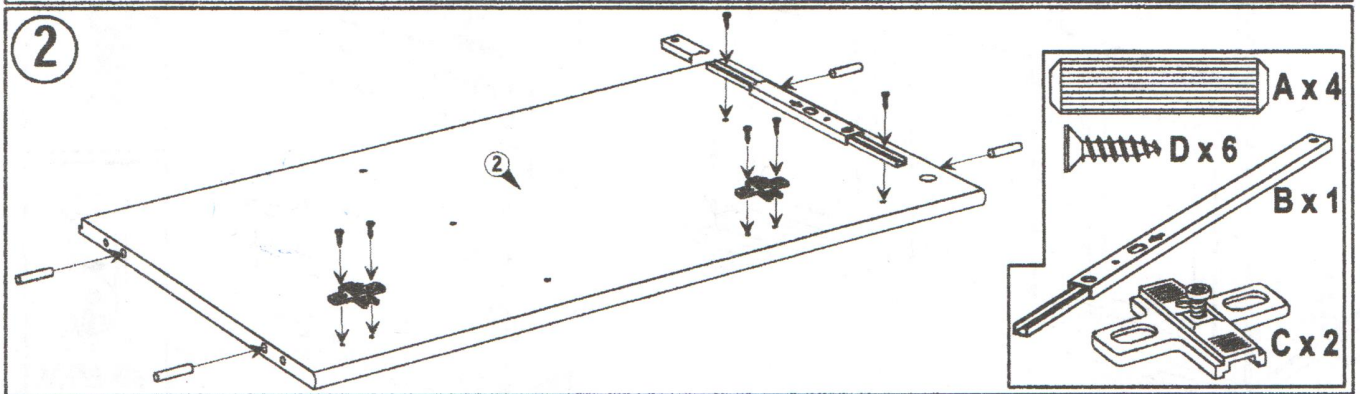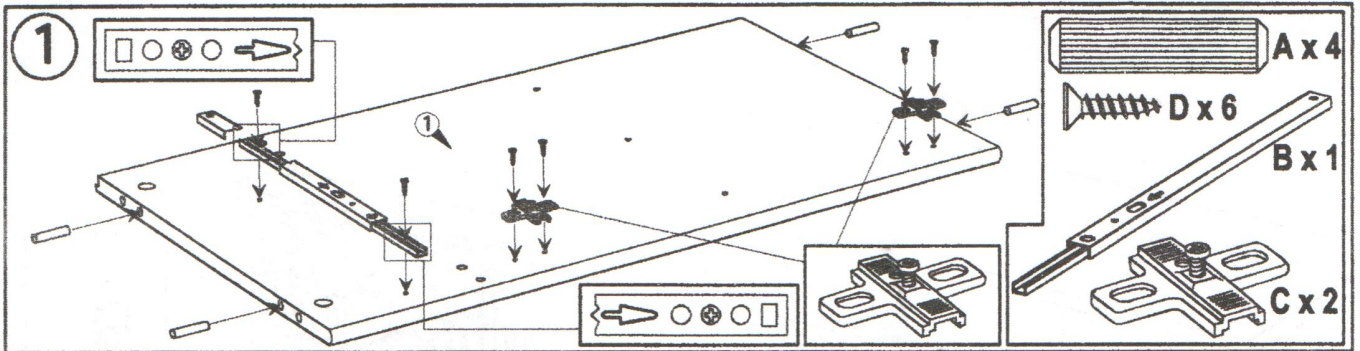





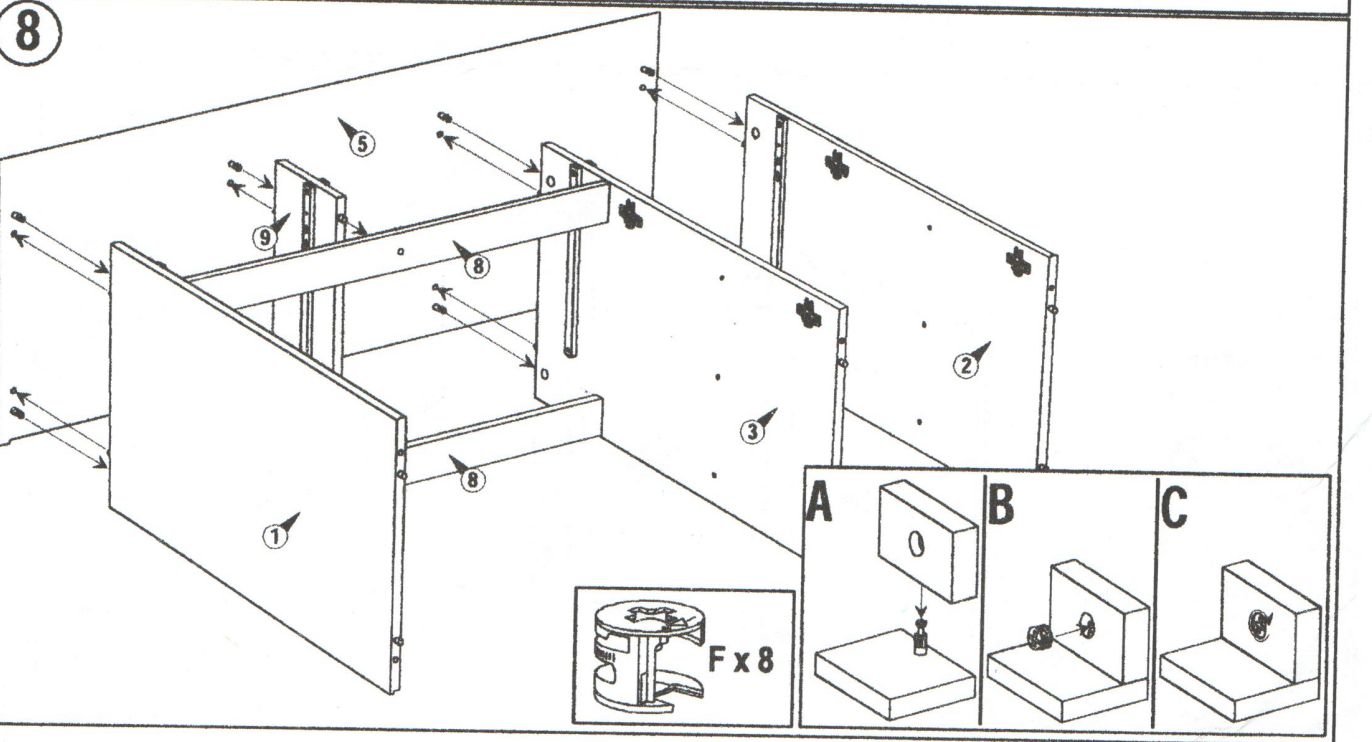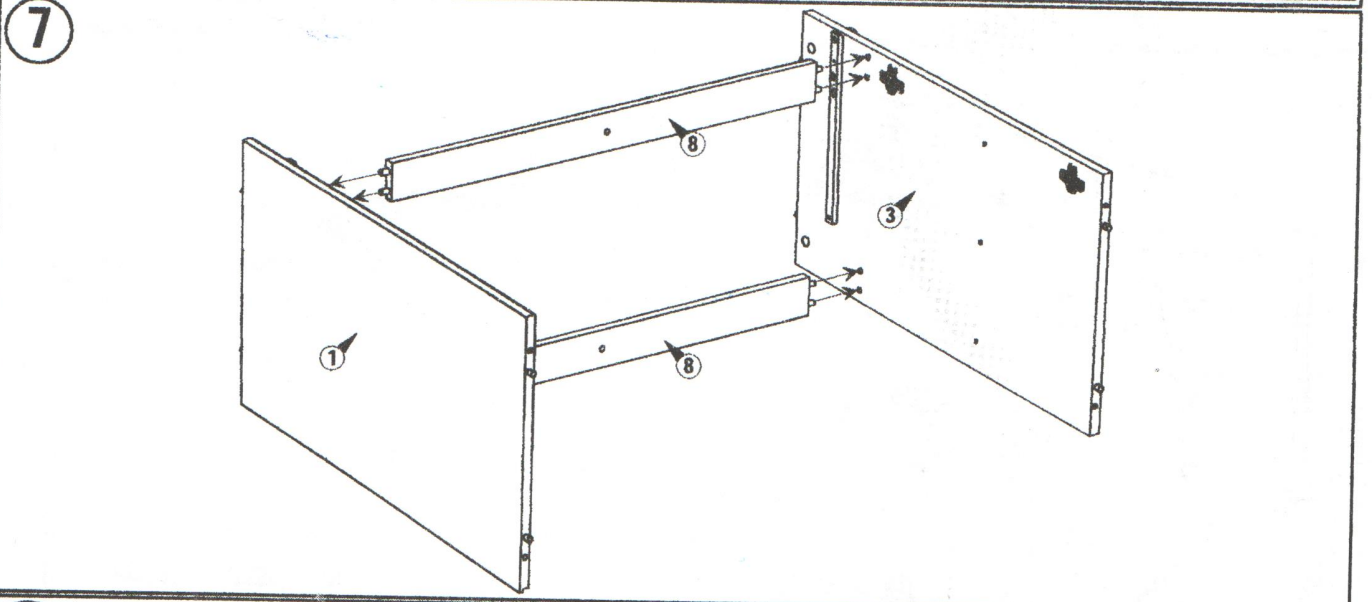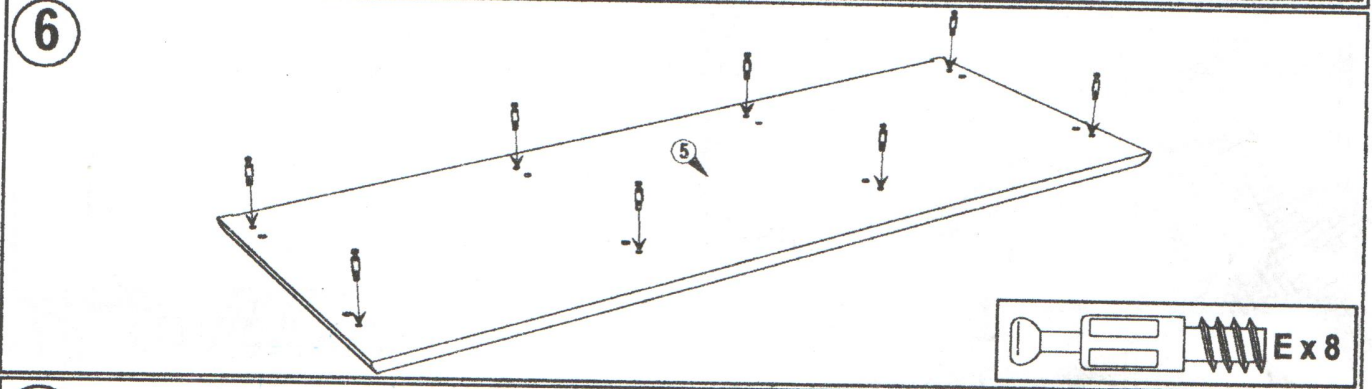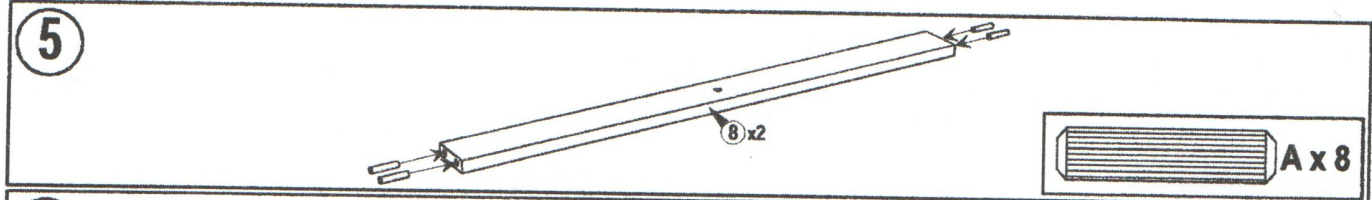



9








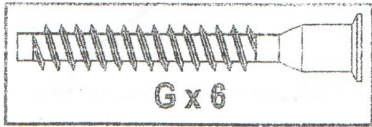
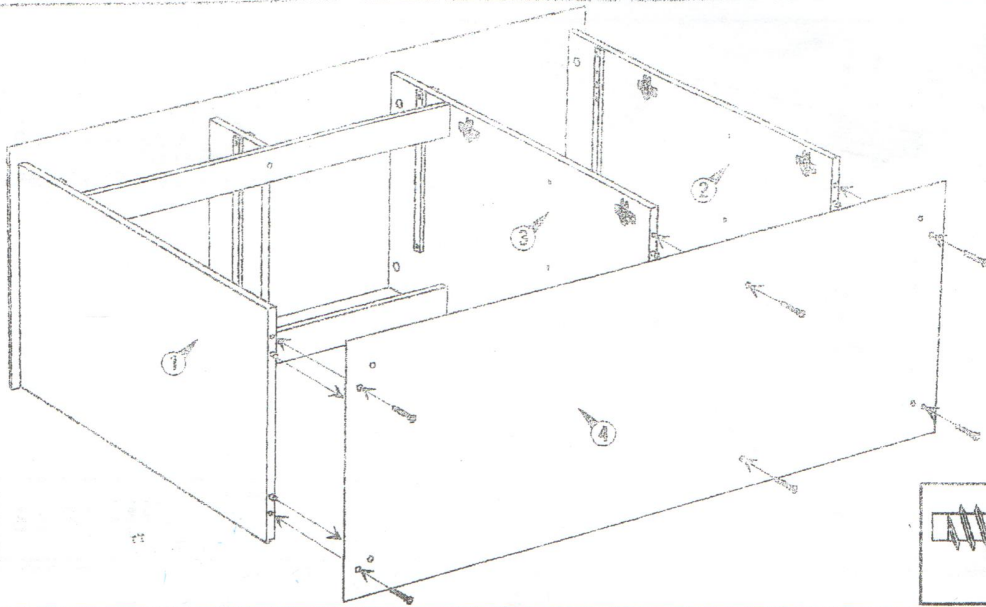


10

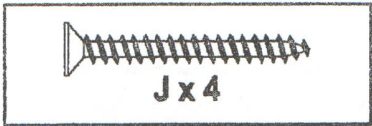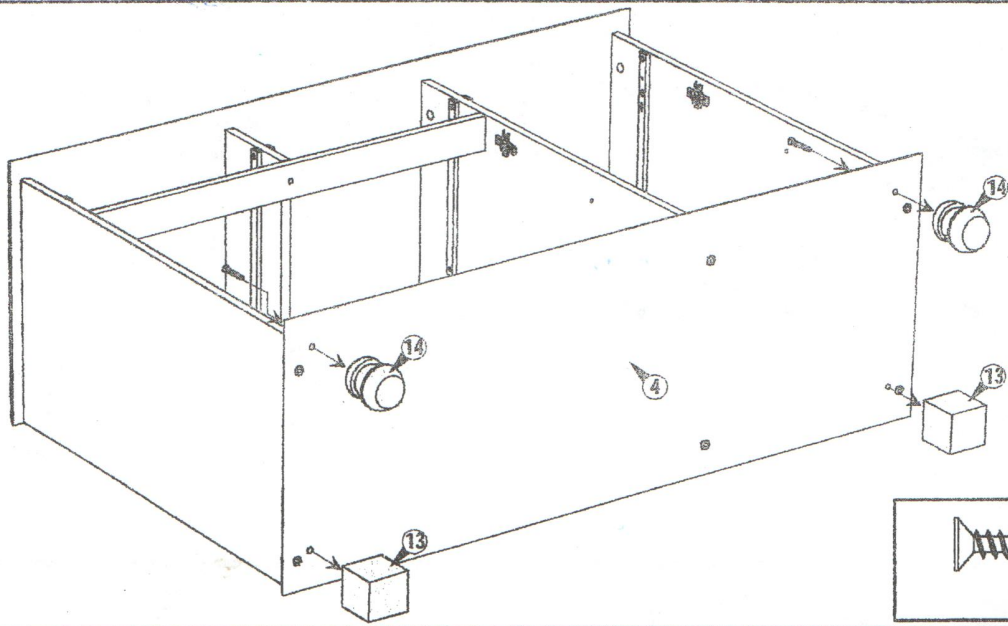


11






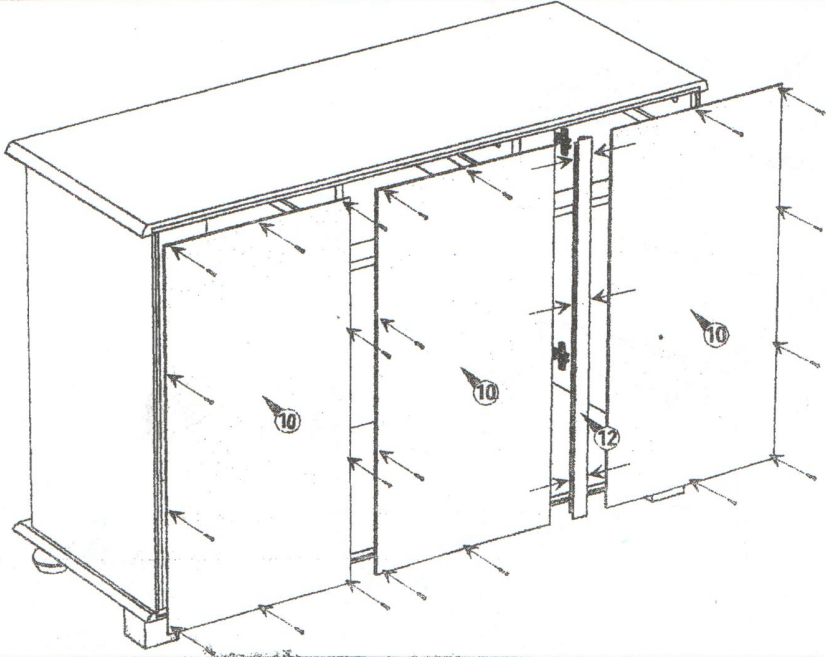


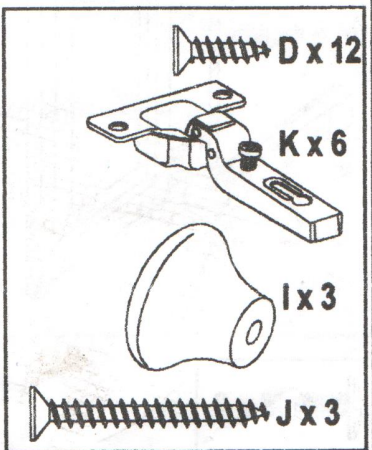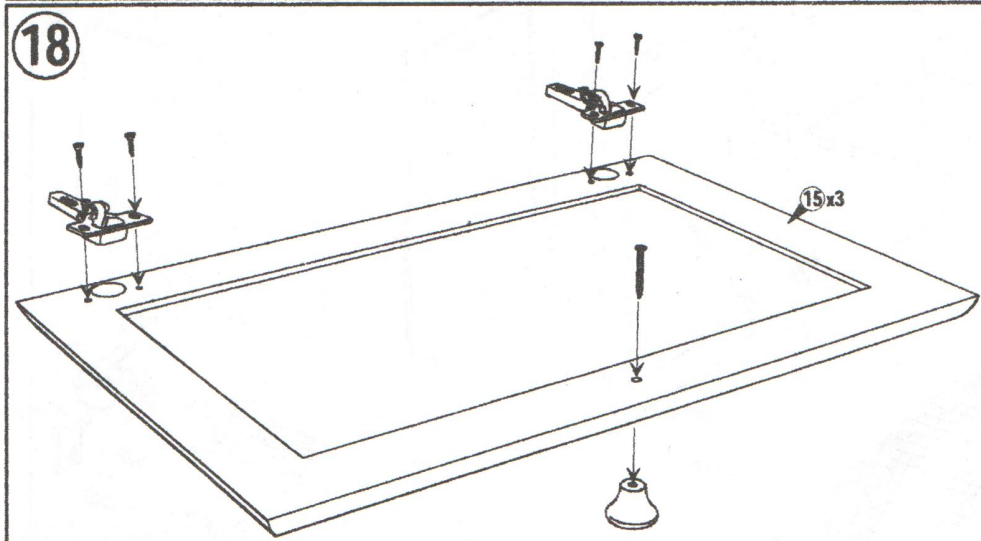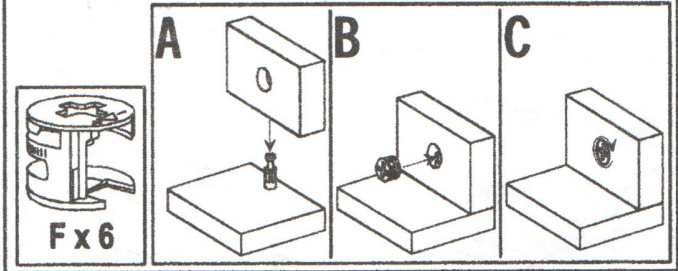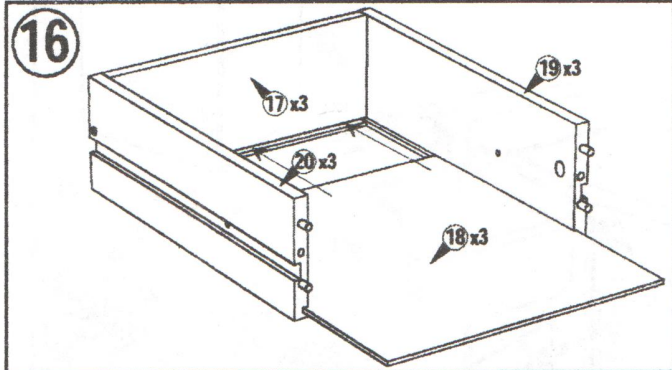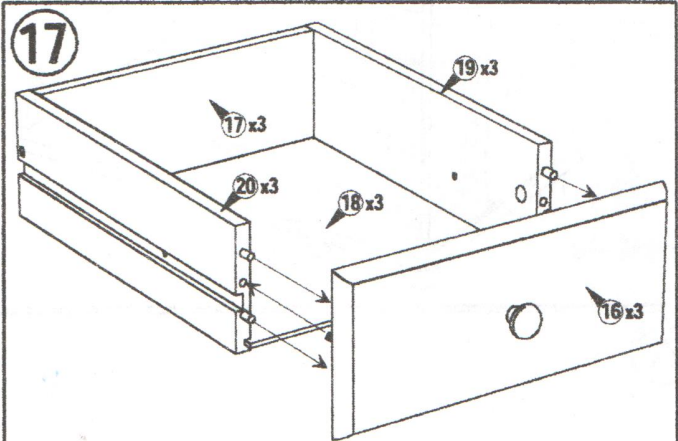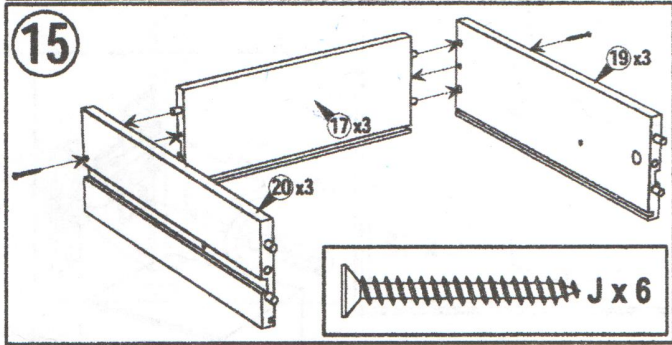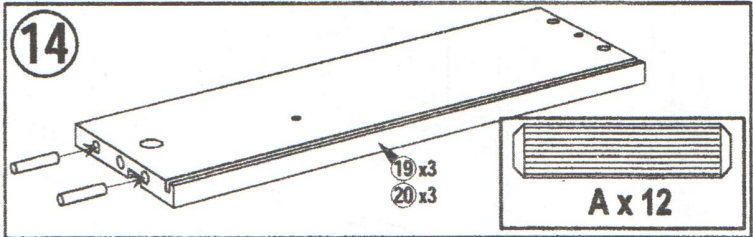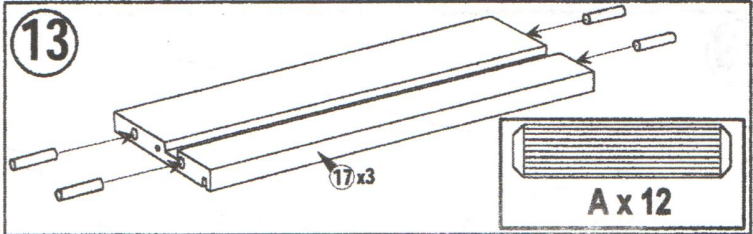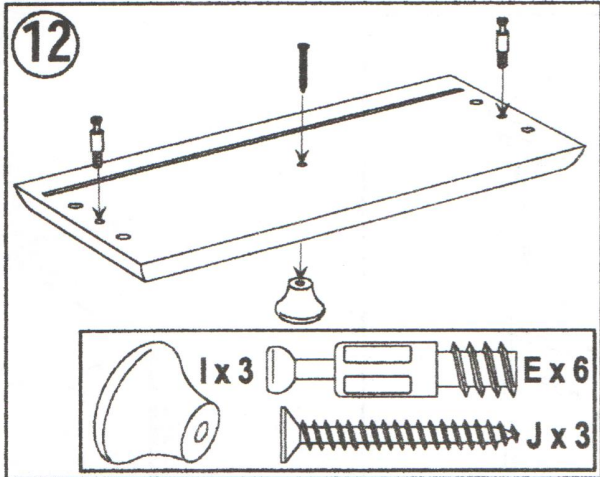


19

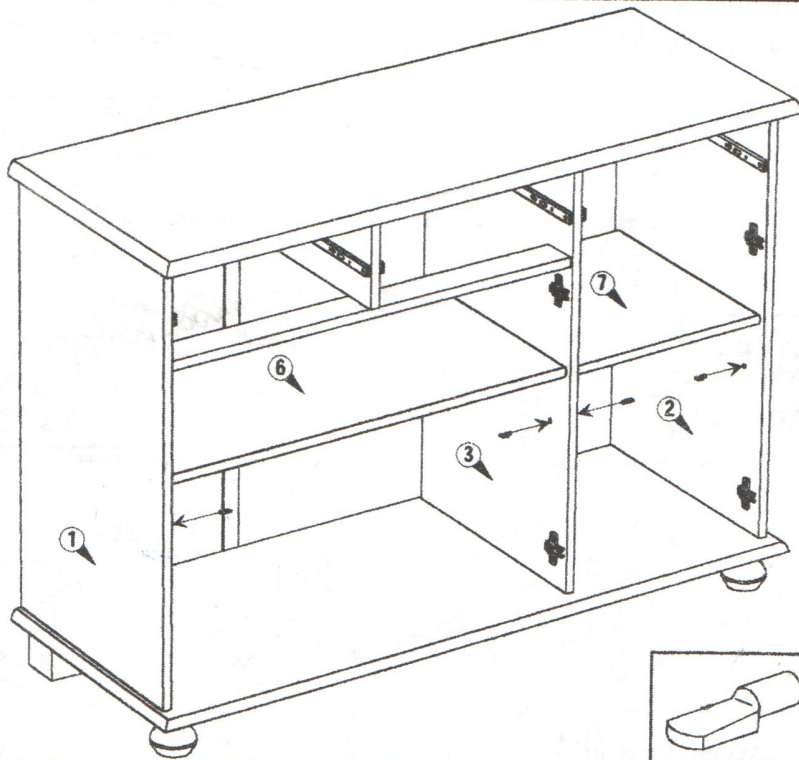

L x 12

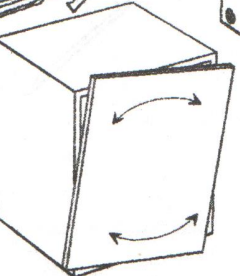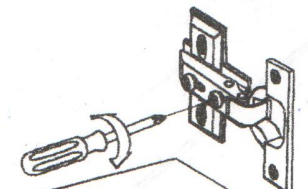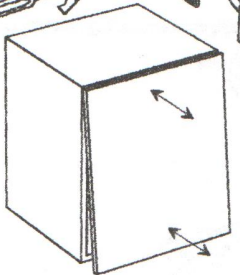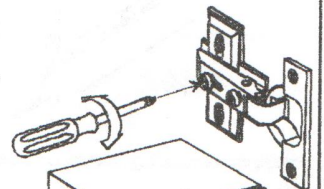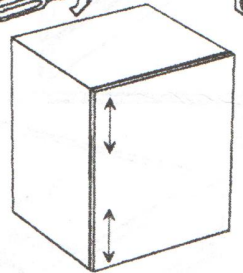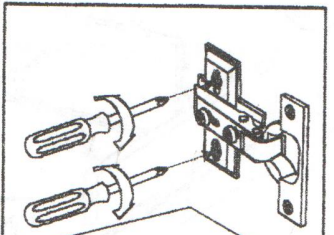

20

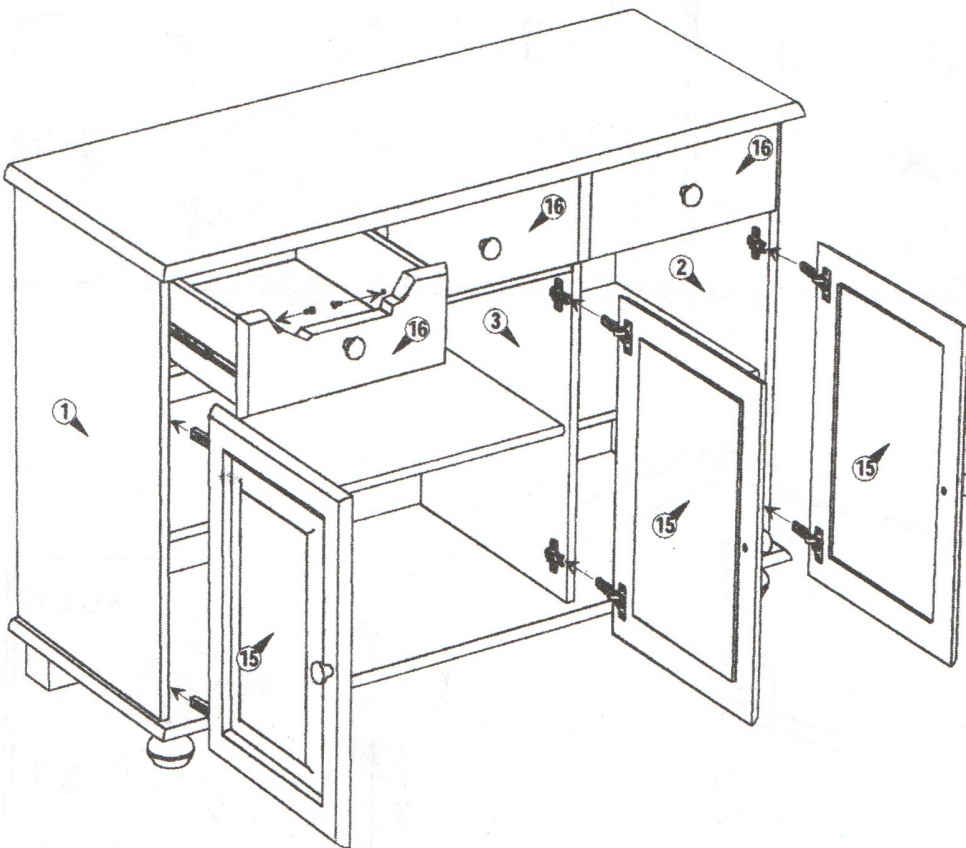

M x 6